

This product contains a RAID software CD. However, the most recent software drivers are posted on Intel's support site. Please visit <http://support.intel.com/support/motherboards/server/> to check for the most recent software version on this product.

Red Hat[†] Linux[†] 7.1 Users Please Read

Product Affected:

Intel[®] RAID Controller SRCMR on Intel[®] Server Board SCB2 running Linux.

Issue:

After Linux has been installed and Linux begins to load, the system stops at the message: “Linux loading...”

Workaround:

You need to disable the Legacy USB support after Linux installation:

1. During POST, press **F2** to enter the BIOS Setup Utility.
2. From the advanced menu, select the peripheral configuration feature.
3. In the peripheral configuration sub-menu, select “Legacy USB support”.
4. Set “Legacy USB support” to “disabled”.
5. Press **F10** and then **Enter** to save configuration changes and exit from setup.
6. Once Linux has been loaded, the Linux OS USB drivers will allow USB devices to be used normally.

Note: Please check the specification update for this product on the support site for updates concerning this issue.

Intel is a registered trademark of Intel Corporation or its subsidiaries in the United States and other countries.

[†] Other names and brands may be claimed as the property of others.

Copyright © 2001, Intel Corporation. All rights reserved.



A76042-003