



## HP Cluster Configuration Support Matrix

### For Microsoft Windows Server 2003, X64 Editions & HP StorageWorks EVA 5000, EVA 3000

Config	Supported Servers*	Host Bus Adapters (HBAs)*	Multi Path Software	Storage Information	Interconnects (Switches)*	Other
Windows Server 2003, x64 Editions	<p>Max supported nodes = 8</p> <p>ProLiant</p> <ul style="list-style-type: none"> <li>• BL20p G3<sup>^^</sup></li> <li>• BL35p<sup>^^</sup></li> <li>• BL25p<sup>^^^</sup></li> <li>• BL45p<sup>^^^</sup></li> <li>• DL360 G4, DL360 G5</li> <li>• DL360 G4p</li> <li>• DL365</li> <li>• DL380 G4, DL380 G5</li> <li>• DL580 G3, DL580 G4</li> <li>• DL585, DL585 G2</li> <li>• DL385, DL385 G2</li> <li>• ML370 G4, ML370 G5</li> <li>• ML570 G3, ML570 G4</li> <li>• BL460c</li> <li>• BL480c</li> <li>• BL465c</li> <li>• BL680c</li> <li>• BL685c</li> </ul> <p><b>*Note:</b> Servers can be used homogeneously or heterogeneously within a cluster.</p> <p><b>^Note:</b> Supports the FC Mezzanine card only.</p> <p><b>^^Note:</b> Supports the FC Balcony card only.</p> <p><b>^^^Note:</b> Supports the FC Adapter Card BL20p G3</p> <p><b>^^^Note:</b> Supports the HPBALCF 105</p> <p><b>Server Software:</b>  <a href="#">SmartStart</a>            Ver: 8.00            (Install non-RBSU servers using SmartStart 5.5 and then apply PSP 7.4)</p>	<p><b>HBA Family 1</b>  <b>StorPort Driver:</b> 7-1.20a7  <b>FW:</b> 1.91a5  <b>BIOS:</b> 1.71a0 (5.02 a1)</p> <ul style="list-style-type: none"> <li>• <a href="#">FCA2404</a></li> <li>• <a href="#">FCA2404DC</a></li> <li>• <a href="#">A7387A</a></li> <li>• <a href="#">A7388A</a></li> </ul> <p><b>HBA Family 2</b>  <b>StorPort Driver:</b> 7-1.20a7  <b>FW:</b> 1.91a5  <b>BIOS:</b> 1.71a0 (5.02 a1)</p> <ul style="list-style-type: none"> <li>• <a href="#">E-FC Balcony Card</a> ^^</li> <li>• <a href="#">E-FC Adapter Card</a> ^^ ^</li> </ul> <p>^^For the BL25p, BL35p, &amp; BL45p use E-FC Balcony Card.            ^^ ^For the BL20p G3 use E-FC Adapter Card</p> <p><b>HBA Family 3</b>  <b>StorPort Driver:</b> 9.1.3.16  <b>FW:</b> Loaded from Driver  <b>BIOS FC Balcony:</b> 1.48  <b>BIOS:</b> 1.45</p> <ul style="list-style-type: none"> <li>• <a href="#">FCA2214</a></li> <li>• <a href="#">FCA2214DC</a></li> <li>• <a href="#">FC Balcony card</a></li> <li>• <a href="#">FC Mezz card</a> ^</li> </ul> <p><b>^For the BL20p G3 use:</b>  <b>BIOS:</b> 1.45 bl20p G3</p> <p><b>HBA Family 4</b>  <b>StorPort Driver:</b> 9.1.3.16  <b>FW:</b> Loaded from Driver  <b>BIOS:</b> 1.48</p> <ul style="list-style-type: none"> <li>• <a href="#">HPBALCF105</a> for BL25p, BL45p</li> </ul> <p><b>HBA Family 5</b>  <b>StorPort Driver:</b> 7-1.20a7  <b>FW:</b> 2.70a5  <b>BIOS:</b> 1.71a0 (5.02 a1)</p> <ul style="list-style-type: none"> <li>• <a href="#">FC2142</a></li> <li>• <a href="#">FC2242</a></li> </ul> <p><b>HBA Family 6</b>  <b>StorPort Driver:</b> 7-1.20a7  <b>FW:</b> 2.70a5  <b>BIOS:</b> 1.71a0 (5.02 a1)</p> <ul style="list-style-type: none"> <li>• <a href="#">FC2143</a></li> <li>• <a href="#">FC2243</a></li> </ul> <p><b>HBA Family 7</b>  <b>StorPort Driver:</b> 7-1.20a7  <b>FW:</b> 2.70a5  <b>BIOS:</b> 3.00a4 (6.00a2)</p> <ul style="list-style-type: none"> <li>• <a href="#">LPe1105</a></li> </ul> <p><b>HBA Family 8</b>  <b>StorPort Driver:</b> 9.1.3.16  <b>FW:</b> 4.00.90  <b>BIOS:</b> 1.26 (1.64)</p> <ul style="list-style-type: none"> <li>• <a href="#">FC1143</a></li> <li>• <a href="#">FC1243</a></li> </ul> <p><b>HBA Family 9</b>  <b>StorPort Driver:</b> 9.1.3.16  <b>FW:</b> 4.00.90  <b>BIOS:</b> 1.26 (1.64)</p>	<p><a href="#">Windows MPIO Full Featured DSM for EVA 2.01.01</a></p> <p><a href="#">StorageWorks Enterprise Virtual Array 5000 Software (VCS) FW: V4.007</a></p> <p><a href="#">StorageWorks Enterprise Virtual Array 3000 Software (VCS) FW: V4.007</a></p> <p><a href="#">HP OpenView Storage Operations Manager</a> Version 1.2</p> <p><a href="#">Replication Solution Manager (RSM)</a> Version 3.0</p> <p><a href="#">CLX EVA for Windows</a> 1.01.01</p> <p><a href="#">Command View</a> Supported: V7.0.x</p>	<p><b>B-Series</b>            StorageWorks SAN Switches (8/16 ports 2GB)  <b>FW:</b> 5.3.0b</p> <p><a href="#">SAN Switch 2/32</a>  <a href="#">SAN Switch 2/8V</a>  <a href="#">SAN Switch 2/16V</a>  <a href="#">SAN Switch 2/16N FF</a>  <a href="#">SAN Director 2/128</a></p> <p>StorageWorks SAN Switches (&gt;32 ports )  <b>FW:</b> 5.0.5e</p> <ul style="list-style-type: none"> <li>• <a href="#">Core Switch 2/64</a></li> </ul> <p>StorageWorks SAN Switches (4GB )  <b>FW:</b> 5.3.0b</p> <ul style="list-style-type: none"> <li>• <a href="#">4/8 SAN Switch</a></li> <li>• <a href="#">4/16 SAN Switch</a></li> <li>• <a href="#">4/32 SAN Switch</a></li> <li>• <a href="#">4/256 SAN Director</a></li> </ul> <p><b>M-Series</b>            StorageWorks Director and Edge Switches  <b>FW:</b> 09.03.00</p> <ul style="list-style-type: none"> <li>• <a href="#">Director 2/64</a></li> <li>• <a href="#">Director 2/140</a></li> <li>• <a href="#">Edge Switch 2/12</a></li> <li>• <a href="#">Edge Switch 2/24</a></li> <li>• <a href="#">Edge Switch 2/32</a></li> </ul> <p><b>C-Series</b>            Cisco Switches  <b>FW:</b> 3.2(1a)</p> <ul style="list-style-type: none"> <li>• <a href="#">MDS 9120</a></li> <li>• <a href="#">MDS 9140</a></li> <li>• <a href="#">MDS 9216</a></li> <li>• <a href="#">MDS 9506</a></li> <li>• <a href="#">MDS 9509</a></li> </ul> <p><b>^^Note:</b> Not supported with BL server line.</p> <p><b>*Note:</b> BL30p server supported with B-series switches only.</p>	<p><a href="#">Product Page</a></p> <p><a href="#">Supporting Documentation</a></p> <p><a href="#">MSCS Support Matrix - archive</a></p> <p style="text-align: right;">November 2007</p>	

		<ul style="list-style-type: none"> <li>• <a href="#">QMH2426</a></li> </ul> <p><b>HBA Family 10</b></p> <p><b>StorPort Driver:</b> 9.1.3.16  <b>FW:</b> Loaded from driver  <b>BIOS:</b> 1.16 (1.41)</p> <ul style="list-style-type: none"> <li>• <a href="#">FC1142</a></li> <li>• <a href="#">FC1242</a></li> </ul> <p><b>*Note 1:</b> HBAs must be used homogeneously within a cluster; but can be mixed if they are from the same HBA family as identified above.</p> <p><b>*Note 2:</b> Refer to Server QuickSpecs for confirmation on supported HBAs.</p> <p><b>*Note 3:</b> Check Microsoft site for hotfixes.</p>				
--	--	---	--	--	--	--

Config	Supported Servers*	Host Bus Adapters (HBAs)*	Multi Path Software	Storage Information	Interconnects (Switches)*	Other
Windows Server 2003, x64 Editions	<p>Max supported nodes = 8</p> <p>ProLiant</p> <ul style="list-style-type: none"> <li>• BL20p G3<sup>^^</sup></li> <li>• BL35p<sup>^^</sup></li> <li>• BL25p<sup>^^^</sup></li> <li>• BL45p<sup>^^^</sup></li> <li>• DL360 G4, DL360 G5</li> <li>• DL360 G4p</li> <li>• DL365</li> <li>• DL380 G4, DL380 G5</li> <li>• DL580 G3, DL580 G4</li> <li>• DL585, DL585 G2</li> <li>• DL385, DL385 G2</li> <li>• ML370 G4, ML370 G5</li> <li>• ML570 G3, ML570 G4</li> <li>• BL460c</li> <li>• BL480c</li> <li>• BL465c</li> <li>• BL685c</li> </ul> <p><b>*Note:</b> Servers can be used homogeneously or heterogeneously within a cluster.</p> <p><b>^Note:</b> Supports the FC Mezzanine card only.</p> <p><b>^^Note:</b> Supports the FC Balcony card only.</p> <p><b>^^^Note:</b> Supports the FC Adapter Card BL20p G3</p> <p><b>^^^Note:</b> Supports the HPBALCF 105</p> <p><b>Server Software:</b>  <a href="#">SmartStart</a>  <b>Ver:</b> 7.70            (Install non-RBSU servers using SmartStart 5.5 and then apply PSP 7.4)</p>	<p><b>HBA Family 1</b>  <b>StorPort Driver:</b> 7-1.20a7  <b>FW:</b> 1.91a5  <b>BIOS:</b> 1.71a0</p> <ul style="list-style-type: none"> <li>• <a href="#">FCA2404</a></li> <li>• <a href="#">FCA2404DC</a></li> <li>• <a href="#">A7387A</a></li> <li>• <a href="#">A7388A</a></li> </ul> <p><b>HBA Family 2</b>  <b>StorPort Driver:</b> 7-1.20a7  <b>FW:</b> 1.91a5  <b>BIOS:</b> 1.71a0</p> <ul style="list-style-type: none"> <li>• <a href="#">E-FC Balcony Card</a> ^^^</li> <li>• <a href="#">E-FC Adapter Card</a> ^^^</li> </ul> <p>^^^For the BL25p, BL35p, &amp; BL45p use E-FC Balcony Card.            ^^^For the BL20p G3 use E-FC Adapter Card</p> <p><b>HBA Family 3</b>  <b>StorPort Driver:</b> 9.1.3.16  <b>FW:</b> NA  <b>BIOS FC Balcony:</b> 1.48  <b>BIOS:</b> 1.45</p> <ul style="list-style-type: none"> <li>• <a href="#">FCA2214</a></li> <li>• <a href="#">FCA2214DC</a></li> <li>• <a href="#">FC Balcony card</a></li> <li>• <a href="#">FC Mezz card</a> ^</li> </ul> <p><b>^For the BL20p G3 use:</b>  <b>BIOS:</b> 1.45 bl20p G3</p> <p><b>HBA Family 4</b>  <b>StorPort Driver:</b> 9.1.3.16  <b>FW:</b> N/A  <b>BIOS:</b> 1.48</p> <ul style="list-style-type: none"> <li>• <a href="#">HPBALCF105</a> for BL25p, BL45p</li> </ul> <p><b>HBA Family 5</b>  <b>StorPort Driver:</b> 7-1.20a7  <b>FW:</b> 2.50a6  <b>BIOS:</b> 1.71a0</p> <ul style="list-style-type: none"> <li>• <a href="#">FC2142</a></li> <li>• <a href="#">FC2242</a></li> </ul> <p><b>HBA Family 6</b>  <b>StorPort Driver:</b> 7-1.20a7  <b>FW:</b> 2.10a10  <b>BIOS:</b> 1.71a0</p> <ul style="list-style-type: none"> <li>• <a href="#">FC2143</a></li> <li>• <a href="#">FC2243</a></li> </ul>	<p><a href="#">Windows MPIO Full Featured DSM for EVA</a>  <b>2.01.00</b></p>	<p><a href="#">StorageWorks Enterprise Virtual Array 5000</a>  <b>Software (VCS) FW:</b>            V4.007</p> <p><a href="#">StorageWorks Enterprise Virtual Array 3000</a>  <b>Software (VCS) FW:</b>            V4.007</p> <p><a href="#">HP OpenView Storage Operations Manager</a>            Version 1.2</p> <p><a href="#">Continuous Access EVA Software</a>            v2.1 User Interface for use with VCS FW 4.004</p> <p><a href="#">CLX EVA for Windows</a>            1.01.01</p> <p><a href="#">Command View</a>  <b>Supported:</b>            V6.0.x</p>	<p><b>B-Series</b>            StorageWorks SAN Switches (8/16 ports 2GB)  <b>FW:</b> 3.2.1b</p> <p><a href="#">MSA SAN Switch 2/8^</a>  <a href="#">SAN Switch 2/16</a>  <b>FW:</b> 5.2.0b</p> <p><a href="#">SAN Switch 2/32</a>  <a href="#">SAN Switch 2/8V</a>  <a href="#">SAN Switch 2/16V</a>  <a href="#">SAN Switch 2/16N FF</a>  <a href="#">SAN Director 2/128</a>  <b>FW:</b> 5.2.0b</p> <p>StorageWorks SAN Switches (&gt;32 ports )  <b>FW:</b> 5.0.5c</p> <p><a href="#">Core Switch 2/64</a></p> <p>StorageWorks SAN Switches (4GB )  <b>FW:</b> 5.2.0b</p> <ul style="list-style-type: none"> <li>• <a href="#">4/8 SAN Switch</a></li> <li>• <a href="#">4/16 SAN Switch</a></li> <li>• <a href="#">4/32 SAN Switch</a></li> <li>• <a href="#">4/256 SAN Director</a></li> </ul> <p><b>M-Series</b>            StorageWorks Director and Edge Switches  <b>FW:</b> 09.00.00</p> <p><a href="#">Director 2/64</a>  <a href="#">Director 2/140</a>  <a href="#">Edge Switch 2/12</a>  <a href="#">Edge Switch 2/24</a>  <a href="#">Edge Switch 2/32</a></p> <p><b>C-Series</b>            Cisco Switches  <b>FW:</b> 3.1(2a)</p> <ul style="list-style-type: none"> <li>• <a href="#">MDS 9120</a></li> <li>• <a href="#">MDS 9140</a></li> <li>• <a href="#">MDS 9216</a></li> <li>• <a href="#">MDS 9506</a></li> <li>• <a href="#">MDS 9509</a></li> </ul> <p><b>^^Note:</b> Not supported with BL server line.</p> <p><b>*Note:</b> BL30p server supported with B-series switches only.</p>	<p><a href="#">Product Page</a></p> <p><a href="#">Supporting Documentation</a></p> <p><a href="#">MSCS Support Matrix - archive</a></p>

		<p><b><u>HBA Family 7</u></b>  <b>StorPort Driver:</b> 7-1.20a7  <b>FW:</b> 2.50a8  <b>BIOS:</b> 3.00a4</p> <ul style="list-style-type: none"> <li>• <a href="#">LPe1105</a></li> </ul> <p><b><u>HBA Family 8</u></b>  <b>StorPort Driver:</b> 9.1.3.16  <b>FW:</b> Loaded from driver  <b>BIOS:</b> 1.16</p> <ul style="list-style-type: none"> <li>• <a href="#">FC1143</a></li> <li>• <a href="#">FC1243</a></li> </ul> <p><b><u>HBA Family 9</u></b>  <b>StorPort Driver:</b> 9.1.3.11  <b>FW:</b> Loaded from driver  <b>BIOS:</b> 1.26</p> <ul style="list-style-type: none"> <li>• <a href="#">QMH2426</a></li> </ul> <p><b><u>HBA Family 10</u></b>  <b>StorPort Driver:</b> 9.1.3.16  <b>FW:</b> Loaded from driver  <b>BIOS:</b> 1.16</p> <ul style="list-style-type: none"> <li>• <a href="#">FC1142</a></li> <li>• <a href="#">FC1242</a></li> </ul> <p><b>*Note 1:</b> HBAs must be used homogeneously within a cluster; but can be mixed if they are from the same HBA family as identified above.</p> <p><b>*Note 2:</b> Refer to Server QuickSpecs for confirmation on supported HBAs.</p> <p><b>*Note 3:</b> Check Microsoft site for hotfixes.</p>				March 2007
--	--	--	--	--	--	------------

Config	Supported Servers*	Host Bus Adapters (HBAs)*	Multi Path Software	Storage Information	Interconnects (Switches)*	Other
Windows Server 2003, x64 Editions	<p>Max supported nodes = 8</p> <p>ProLiant</p> <ul style="list-style-type: none"> <li>• BL20p G3<sup>^^</sup></li> <li>• BL35p<sup>^^</sup></li> <li>• BL25p<sup>^^^</sup></li> <li>• BL45p<sup>^^^</sup></li> <li>• DL360 G4, DL360 G5</li> <li>• DL360 G4p</li> <li>• DL365</li> <li>• DL380 G4, DL380 G5</li> <li>• DL580 G3, DL580 G4</li> <li>• DL585, DL585 G2</li> <li>• DL385, DL385 G2</li> <li>• ML370 G4, ML370 G5</li> <li>• ML570 G3, ML570 G4</li> <li>• BL460c</li> <li>• BL480c</li> <li>• BL465c</li> <li>• BL685c</li> </ul> <p><b>*Note:</b> Servers can be used homogeneously or heterogeneously within a cluster.</p> <p><b>^Note:</b> Supports the FC Mezzanine card only.</p> <p><b>^^Note:</b> Supports the FC Balcony card only.</p> <p><b>^^^Note:</b> Supports the FC Adapter Card BL20p G3</p> <p><b>^^^Note:</b> Supports the HPBALCF 105</p> <p><b>Server Software:</b>  <a href="#">SmartStart</a>  Ver: 7.60  (Install non-RBSU servers using SmartStart 5.5 and then apply PSP 7.4)</p>	<p><b>HBA Family 1</b>  <b>StorPort Driver:</b> 7-1.20a7  <b>FW:</b> 1.91a5  <b>BIOS:</b> 1.71a0</p> <ul style="list-style-type: none"> <li>• <a href="#">FCA2404</a></li> <li>• <a href="#">FCA2404DC</a></li> <li>• <a href="#">A7387A</a></li> <li>• <a href="#">A7388A</a></li> </ul> <p><b>HBA Family 2</b>  <b>StorPort Driver:</b> 7-1.20a7  <b>FW:</b> 1.91a5  <b>BIOS:</b> 1.71a0</p> <ul style="list-style-type: none"> <li>• <a href="#">E-FC Balcony Card</a> ^^</li> <li>• <a href="#">E-FC Adapter Card</a> ^^</li> </ul> <p>^^For the BL25p, BL35p, &amp; BL45p use E-FC Balcony Card.  ^^^For the BL20p G3 use E-FC Adapter Card</p> <p><b>HBA Family 3</b>  <b>StorPort Driver:</b> 9.1.3.16  <b>FW:</b> NA  <b>BIOS:</b> 1.48</p> <ul style="list-style-type: none"> <li>• <a href="#">FCA2214</a></li> <li>• <a href="#">FCA2214DC</a></li> <li>• <a href="#">FC Balcony card</a></li> <li>• <a href="#">FC Mezz card</a> ^</li> </ul> <p><b>^For the BL20p G3 use:</b>  <b>BIOS:</b> 1.45 bl20p G3</p> <p><b>HBA Family 4</b>  <b>StorPort Driver:</b> 9.1.3.16  <b>FW:</b> N/A  <b>BIOS:</b> 1.48</p> <ul style="list-style-type: none"> <li>• <a href="#">HPBALCF105</a> for BL25p, BL45p</li> </ul> <p><b>HBA Family 5</b>  <b>StorPort Driver:</b> 7-1.20a7  <b>FW:</b> 2.50a6  <b>BIOS:</b> 1.71a0</p> <ul style="list-style-type: none"> <li>• <a href="#">FC2142</a></li> <li>• <a href="#">FC2242</a></li> </ul> <p><b>HBA Family 6</b>  <b>StorPort Driver:</b> 7-1.20a7  <b>FW:</b> 2.10a10  <b>BIOS:</b> 1.71a0</p> <ul style="list-style-type: none"> <li>• <a href="#">FC2143</a></li> <li>• <a href="#">FC2243</a></li> </ul> <p><b>HBA Family 7</b>  <b>StorPort Driver:</b> 7-1.11x1  <b>FW:</b> 2.50a8  <b>BIOS:</b> 1.70a3</p> <ul style="list-style-type: none"> <li>• <a href="#">LPe1105</a></li> </ul> <p><b>HBA Family 8</b>  <b>StorPort Driver:</b> 9.1.3.16  <b>FW:</b> Loaded from driver  <b>BIOS:</b> 1.16</p> <ul style="list-style-type: none"> <li>• <a href="#">FC1143</a></li> <li>• <a href="#">FC1243</a></li> </ul> <p><b>HBA Family 9</b>  <b>StorPort Driver:</b> 9.1.0.18  <b>FW:</b> Loaded from driver  <b>BIOS:</b> 1.16</p> <ul style="list-style-type: none"> <li>• <a href="#">QMH2426</a></li> </ul> <p><b>HBA Family 10</b>  <b>StorPort Driver:</b> 9.1.3.16  <b>FW:</b> Loaded from driver  <b>BIOS:</b> 1.16</p> <ul style="list-style-type: none"> <li>• <a href="#">FC1142</a></li> </ul>	<p><a href="#">Windows MPIO Full Featured DSM for EVA V1.00.00</a></p> <p><a href="#">Windows MPIO Full Featured DSM for EVA V2.00.00</a></p>	<p><a href="#">StorageWorks Enterprise Virtual Array 5000</a>  <b>Software (VCS) FW:</b> V4.004</p> <p><a href="#">StorageWorks Enterprise Virtual Array 3000</a>  <b>Software (VCS) FW:</b> V4.004</p> <p><a href="#">HP OpenView Storage Operations Manager</a>  Version 1.2</p> <p><a href="#">Continuous Access EVA Software</a>  v2.1 User Interface for use with VCS FW 4.004</p> <p><a href="#">CLX EVA for Windows</a>  1.01.01</p> <p><a href="#">Command View Minimum Version</a>  V4.1.2</p> <p><b>Recommended Version</b>  V5.0</p>	<p><b>B-Series</b>  StorageWorks SAN Switches (8/16 ports 2GB)  <b>FW:</b> 3.2.1b</p> <ul style="list-style-type: none"> <li>• <a href="#">SAN Switch 2/16</a></li> </ul> <p><b>FW:</b> 5.2.0</p> <ul style="list-style-type: none"> <li>• <a href="#">SAN Switch 2/32</a></li> <li>• <a href="#">SAN Switch 2/8V</a></li> <li>• <a href="#">SAN Switch 2/16V</a></li> <li>• <a href="#">SAN Switch 2/16N FF</a></li> <li>• <a href="#">SAN Director 2/128</a></li> </ul> <p>StorageWorks SAN Switches (&gt;32 ports )  <b>FW:</b> 5.2.0</p> <ul style="list-style-type: none"> <li>• <a href="#">Core Switch 2/64</a>  1.01.01</li> </ul> <p>StorageWorks SAN Switches (4GB )  <b>FW:</b> 5.2.0</p> <ul style="list-style-type: none"> <li>• <a href="#">4/8 SAN Switch</a></li> <li>• <a href="#">4/16 SAN Switch</a></li> <li>• <a href="#">4/32 SAN Switch</a></li> <li>• <a href="#">4/256 SAN Director</a></li> </ul> <p><b>M-Series</b>  StorageWorks Director and Edge Switches  <b>FW:</b> 09.00.00</p> <ul style="list-style-type: none"> <li>• <a href="#">Director 2/64</a></li> <li>• <a href="#">Director 2/140</a></li> <li>• <a href="#">Edge Switch 2/12</a></li> <li>• <a href="#">Edge Switch 2/24</a></li> <li>• <a href="#">Edge Switch 2/32</a></li> </ul> <p><b>C-Series</b>  Cisco Switches  <b>FW:</b> 3.0(3)</p> <ul style="list-style-type: none"> <li>• <a href="#">MDS 9120</a></li> <li>• <a href="#">MDS 9140</a></li> <li>• <a href="#">MDS 9216</a></li> <li>• <a href="#">MDS 9506</a></li> <li>• <a href="#">MDS 9509</a></li> </ul>	<p><a href="#">Product Page</a></p> <p><a href="#">Supporting Documentation</a></p> <p><a href="#">MSCS Support Matrix - archive</a></p> <p>January 2007</p>

		<ul style="list-style-type: none"><li>• <a href="#">FC1242</a></li></ul> <p><b>*Note 1:</b> HBAs must be used homogeneously within a cluster; but can be mixed if they are from the same HBA family as identified above.</p> <p><b>*Note 2:</b> Refer to Server QuickSpecs for confirmation on supported HBAs.</p> <p><b>*Note 3:</b> Check Microsoft site for hotfixes.</p>				
--	--	--	--	--	--	--

Config	Supported Servers*	Host Bus Adapters (HBAs)*	Multi Path Software	Storage Information	Interconnects (Switches)*	Other
Windows Server 2003, x64 Editions	<p>Max supported nodes = 8</p> <p>ProLiant</p> <ul style="list-style-type: none"> <li>• BL20p G3<sup>^^</sup></li> <li>• BL35p<sup>^^</sup></li> <li>• BL25p<sup>^^^</sup></li> <li>• BL45p<sup>^^^</sup></li> <li>• DL360 G4, DL360 G5</li> <li>• DL360 G4p</li> <li>• DL365</li> <li>• DL380 G4, DL380 G5</li> <li>• DL580 G3, DL580 G4</li> <li>• DL585, DL585 G2</li> <li>• DL385, DL385 G2</li> <li>• ML370 G4, ML370 G5</li> <li>• ML570 G3, ML570 G4</li> <li>• BL460c</li> <li>• BL480c</li> <li>• BL465c</li> <li>• BL685c</li> </ul> <p><b>*Note:</b> Servers can be used homogeneously or heterogeneously within a cluster.</p> <p><b>^Note:</b> Supports the FC Mezzanine card only.</p> <p><b>^^Note:</b> Supports the FC Balcony card only.</p> <p><b>^^^Note:</b> Supports the FC Adapter Card BL20p G3</p> <p><b>^^^Note:</b> Supports the HPBALCF 105</p> <p><b>Server Software:</b>  <a href="#">SmartStart</a>  Ver: 7.60  (Install non-RBSU servers using SmartStart 5.5 and then apply PSP 7.4)</p>	<p><b>HBA Family 1</b>  StorPort Driver: 7-1.20a7  FW: 1.91a5  BIOS: 1.71a0</p> <ul style="list-style-type: none"> <li>• <a href="#">FCA2404</a></li> <li>• <a href="#">FCA2404DC</a></li> <li>• <a href="#">A7387A</a></li> <li>• <a href="#">A7388A</a></li> </ul> <p><b>HBA Family 2</b>  StorPort Driver: 7-1.20a7  FW: 1.91a5  BIOS: 1.71a0</p> <ul style="list-style-type: none"> <li>• <a href="#">E-FC Balcony Card</a> <sup>^^</sup></li> <li>• <a href="#">E-FC Adapter Card</a> <sup>^^^</sup></li> </ul> <p><sup>^^</sup>For the BL25p, BL35p, &amp; BL45p use E-FC Balcony Card.  <sup>^^^</sup>For the BL20p G3 use E-FC Adapter Card</p> <p><b>HBA Family 3</b>  StorPort Driver: 9.1.3.16  FW: NA  BIOS: 1.48</p> <ul style="list-style-type: none"> <li>• <a href="#">FCA2214</a></li> <li>• <a href="#">FCA2214DC</a></li> <li>• <a href="#">FC Balcony card</a></li> <li>• <a href="#">FC Mezz card</a> <sup>^</sup></li> </ul> <p><b>^For the BL20p G3 use:</b>  BIOS: 1.45 bl20p G3</p> <p><b>HBA Family 4</b>  StorPort Driver: 9.1.3.16  FW: N/A  BIOS: 1.48</p> <ul style="list-style-type: none"> <li>• <a href="#">HPBALCF105</a> for BL25p, BL45p</li> </ul> <p><b>HBA Family 5</b>  StorPort Driver: 7-1.20a7  FW: 2.50a6  BIOS: 1.71a0</p> <ul style="list-style-type: none"> <li>• <a href="#">FC2142</a></li> <li>• <a href="#">FC2242</a></li> </ul> <p><b>HBA Family 6</b>  StorPort Driver: 7-1.20a7  FW: 2.10a10  BIOS: 1.71a0</p> <ul style="list-style-type: none"> <li>• <a href="#">FC2143</a></li> <li>• <a href="#">FC2243</a></li> </ul> <p><b>HBA Family 7</b>  StorPort Driver: 7-1.11x1  FW: 2.50a8  BIOS: 1.70a3</p> <ul style="list-style-type: none"> <li>• <a href="#">LPe1105</a></li> </ul> <p><b>HBA Family 8</b>  StorPort Driver: 9.1.3.16  FW: Loaded from driver  BIOS: 1.16</p> <ul style="list-style-type: none"> <li>• <a href="#">FC1143</a></li> <li>• <a href="#">FC1243</a></li> </ul> <p><b>HBA Family 9</b>  StorPort Driver: 9.1.0.18  FW: Loaded from driver  BIOS: 1.16</p> <ul style="list-style-type: none"> <li>• <a href="#">QMH2426</a></li> </ul> <p><b>HBA Family 10</b>  StorPort Driver: 9.1.3.16  FW: Loaded from driver  BIOS: 1.16</p> <ul style="list-style-type: none"> <li>• <a href="#">FC1142</a></li> </ul>	<p><a href="#">Windows MPIO Full Featured DSM for EVA V1.01.00</a></p>	<p><a href="#">StorageWorks Enterprise Virtual Array 5000</a>  Software (VCS) FW: V3.100</p> <p><a href="#">StorageWorks Enterprise Virtual Array 3000</a>  Software (VCS) FW: V3.100</p> <p><a href="#">HP OpenView Storage Operations Manager</a>  Version 1.2</p> <p><a href="#">Continuous Access EVA Software</a>  v2.1 User Interface for use with VCS FW 4.004</p> <p><a href="#">CLX EVA for Windows</a>  1.01.01</p> <p><a href="#">Command View Minimum Version</a>  6.0</p>	<p><b>B-Series</b>  StorageWorks SAN Switches (8/16 ports 2GB)  FW: 3.2.1b</p> <ul style="list-style-type: none"> <li>• <a href="#">SAN Switch 2/16</a></li> </ul> <p>FW: 5.2.0</p> <ul style="list-style-type: none"> <li>• <a href="#">SAN Switch 2/32</a></li> <li>• <a href="#">SAN Switch 2/8V</a></li> <li>• <a href="#">SAN Switch 2/16V</a></li> <li>• <a href="#">SAN Switch 2/16N FF</a></li> <li>• <a href="#">SAN Director 2/128</a></li> </ul> <p>StorageWorks SAN Switches (&gt;32 ports )  FW: 5.2.0</p> <ul style="list-style-type: none"> <li>• <a href="#">Core Switch 2/64</a>  1.01.01</li> </ul> <p>StorageWorks SAN Switches (4GB )  FW: 5.2.0</p> <ul style="list-style-type: none"> <li>• <a href="#">4/8 SAN Switch</a></li> <li>• <a href="#">4/16 SAN Switch</a></li> <li>• <a href="#">4/32 SAN Switch</a></li> <li>• <a href="#">4/256 SAN Director</a></li> </ul> <p><b>M-Series</b>  StorageWorks Director and Edge Switches  FW: 09.00.00</p> <ul style="list-style-type: none"> <li>• <a href="#">Director 2/64</a></li> <li>• <a href="#">Director 2/140</a></li> <li>• <a href="#">Edge Switch 2/12</a></li> <li>• <a href="#">Edge Switch 2/24</a></li> <li>• <a href="#">Edge Switch 2/32</a></li> </ul> <p><b>C-Series</b>  Cisco Switches  FW: 3.0(3)</p> <ul style="list-style-type: none"> <li>• <a href="#">MDS 9120</a></li> <li>• <a href="#">MDS 9140</a></li> <li>• <a href="#">MDS 9216</a></li> <li>• <a href="#">MDS 9506</a></li> <li>• <a href="#">MDS 9509</a></li> </ul>	<p><a href="#">Product Page</a></p> <p><a href="#">Supporting Documentation</a></p> <p><a href="#">MSCS Support Matrix - archive</a></p> <p>January 2007</p>

		<p>• <a href="#">FC1242</a></p> <p><b>*Note 1:</b> HBAs must be used homogeneously within a cluster; but can be mixed if they are from the same HBA family as identified above.</p> <p><b>*Note 2:</b> Refer to Server QuickSpecs for confirmation on supported HBAs.</p> <p><b>*Note 3:</b> Check Microsoft site for hotfixes.</p>				
--	--	---	--	--	--	--

Config	Supported Servers*	Host Bus Adapters (HBAs)*	Multi Path Software	Storage Information	Interconnects (Switches)*	Other
<p>#1</p> <p>Windows Server 2003, x64 Editions</p>	<p><b>Max Supported nodes = 8</b></p> <p>ProLiant</p> <ul style="list-style-type: none"> <li>• BL20p G3<sup>^^^</sup></li> <li>• BL25p<sup>^^^</sup></li> <li>• BL35p<sup>^^</sup></li> <li>• BL45p<sup>^^^</sup></li> <li>• DL360 G4</li> <li>• DL360 G4p</li> <li>• DL380 G4</li> <li>• DL580 G3</li> <li>• DL585</li> <li>• DL385</li> <li>• ML370 G4</li> <li>• ML570 G3</li> </ul> <p><b>*Note:</b> Servers can be used homogeneously or heterogeneously within a cluster.</p> <p><b>^Note:</b> Supports the FC Mezzanine card only.</p> <p><b>^^Note:</b> Supports the FC Balcony card only.</p> <p><b>^^^Note:</b> Supports the FC Adapter Card BL20p G3</p> <p><b>^^^Note:</b> Supports the HPBALCF 105</p> <p><b>Server Software:</b>  <a href="#">SmartStart</a>  <b>Ver: 7.4</b>            (Install non-RBSU servers using SmartStart 5.5 and then apply PSP 7.4)</p>	<p><b>HBA Family 1</b>  <b>StorPort Driver:</b> 7-1.11a0  <b>FW:</b> 1.91a1  <b>BIOS:</b> 1.70a3</p> <ul style="list-style-type: none"> <li>• <a href="#">FCA2404</a></li> <li>• <a href="#">FCA2404DC</a></li> <li>• <a href="#">A7560A (1050EX)</a></li> <li>• <a href="#">A7387A</a></li> <li>• <a href="#">A7388A</a></li> </ul> <p><b>HBA Family 2</b>  <b>StorPort Driver:</b> 7-1.11a0  <b>FW:</b> 1.91a2  <b>BIOS:</b> 1.70a3</p> <ul style="list-style-type: none"> <li>• <a href="#">E-FC Balcony Card</a> ^^</li> <li>• <a href="#">E-FC Adapter Card</a> ^^</li> </ul> <p><b>^^For the BL25p, BL30p, BL35p, &amp; BL45p use E-FC Balcony Card.</b></p> <p><b>^^^For the BL20p G3 use E-FC Adapter Card.</b></p> <p><b>HBA Family 3</b>  <b>StorPort Driver:</b> 9.0.2.16  <b>FW:</b> NA  <b>BIOS:</b> 1.45</p> <ul style="list-style-type: none"> <li>• <a href="#">FC Balcony card</a></li> <li>• <a href="#">FC Mezz card</a></li> </ul> <p><b>HBA Family 4</b>  <b>StorPort Driver:</b> 9.1.0.18  <b>FW:</b> NA  <b>BIOS:</b> 1.45</p> <ul style="list-style-type: none"> <li>• <a href="#">FCA2214</a></li> <li>• <a href="#">FCA2214DC</a></li> </ul> <p><b>HBA Family 4</b>  <b>StorPort Driver:</b> 9.0.2.16  <b>FW:</b> NA  <b>BIOS:</b> 1.48</p> <p><a href="#">HPBALCF105</a> for BL25p, BL45p</p> <p><b>HBA Family 5</b>  <b>StorPort Driver:</b> 7-1.11a0  <b>FW:</b> 2.50a2  <b>BIOS:</b> 1.70a3</p> <ul style="list-style-type: none"> <li>• <a href="#">FC2142SR</a></li> <li>• <a href="#">FC2242SR DC</a></li> </ul> <p><b>HBA Family 6</b>  <b>SCSIport Driver:</b> 9.1.0.18  <b>FW:</b> NA  <b>BIOS:</b> 1.06</p> <ul style="list-style-type: none"> <li>• <a href="#">FC1142SR</a></li> <li>• <a href="#">FC1242SR DC</a></li> </ul> <p><b>*Note 1:</b> HBAs must be used homogeneously within a cluster; but can be mixed if they are from the same HBA family as identified above.</p>	<p><a href="#">Windows MPIO DSM for EVA</a>  V1.00.00</p>	<p><a href="#">StorageWorks Enterprise Virtual Array 5000</a>  <b>Software (VCS) FW:</b> V4.001</p> <p><a href="#">StorageWorks Enterprise Virtual Array 3000</a>  <b>Software (VCS) FW:</b> V4.001</p> <p><a href="#">HP OpenView Storage Operations Manager</a>  Version 1.2</p> <p><a href="#">Continuous Access EVA Software</a>  V2.1 User Interface for use with VCS FW 4.001</p> <p><a href="#">CLX EVA for Windows</a>  1.01.00</p> <p><a href="#">Command View Minimum Version</a>  V4.1</p> <p><b>Recommended Version</b>  V4.1.2</p>	<p><b>B-Series</b>  StorageWorks SAN Switches (8/16 ports 2GB)  <b>FW:</b> 3.2.0a</p> <ul style="list-style-type: none"> <li>• <a href="#">SAN Switch 2/16</a></li> </ul> <p><b>FW:</b> 5.0.1d</p> <ul style="list-style-type: none"> <li>• <a href="#">SAN Switch 2/8V</a></li> <li>• <a href="#">SAN Switch 2/16V</a></li> <li>• <a href="#">SAN Switch 2/16N FF</a></li> </ul> <p>StorageWorks SAN Switches (&gt;32 ports )  <b>FW:</b> 5.0.1d</p> <ul style="list-style-type: none"> <li>• <a href="#">SAN Switch 2/32</a></li> <li>• <a href="#">Core Switch 2/64</a></li> <li>• <a href="#">SAN Director 2/128</a></li> </ul> <p>StorageWorks SAN Switches (4GB )  <b>FW:</b> 5.0.1d</p> <p><a href="#">4/8 SAN Switch</a>  <a href="#">4/16 SAN Switch</a>  <a href="#">4/32 SAN Switch</a>  <a href="#">4/256 SAN Director</a></p> <p><b>M-Series</b>  StorageWorks Director and Edge Switches  <b>FW:</b> 08.01.00</p> <ul style="list-style-type: none"> <li>• <a href="#">Director 2/64</a></li> <li>• <a href="#">Director 2/140</a></li> <li>• <a href="#">Edge Switch 2/12</a></li> <li>• <a href="#">Edge Switch 2/24</a></li> <li>• <a href="#">Edge Switch 2/32</a></li> </ul> <p><b>C-Series</b>  Cisco Switches  <b>FW:</b> 2.1(2b)</p> <ul style="list-style-type: none"> <li>• <a href="#">MDS 9120</a></li> <li>• <a href="#">MDS 9140</a></li> <li>• <a href="#">MDS 9216</a></li> <li>• <a href="#">MDS 9506</a></li> <li>• <a href="#">MDS 9509</a></li> </ul>	<p><a href="#">Product Page</a></p> <p><a href="#">Supporting Documentation</a></p> <p><a href="#">MCS Support Matrix - archive</a></p> <p>January. 2006</p>

		<b>*Note 2:</b> Refer to Server QuickSpecs for confirmation on supported HBAs.				
--	--	--	--	--	--	--