



## HP Cluster Configuration Support Matrix For Microsoft Windows Server 2003, x64 Editions HP StorageWorks MSA1500cs

Config	Supported Servers*	Host Bus Adapters (HBAs)*	Multi Path Software	Storage Information*	Interconnects (Switches)*	Other
Windows Server 2003 x64 EE SP2	<p>Max supported nodes = 8</p> <p>ProLiant</p> <ul style="list-style-type: none"> <li>• BL20p G3<sup>^^</sup></li> <li>• BL35p<sup>^^</sup></li> <li>• BL25p<sup>^^</sup></li> <li>• BL45p<sup>^^</sup></li> <li>• DL360 G4, DL360 G5</li> <li>• DL360 G4p</li> <li>• DL365</li> <li>• DL380 G4, DL380 G5</li> <li>• DL580 G3, DL580 G4, DL580 G5</li> <li>• DL585, DL585 G2</li> <li>• DL385, DL385 G2</li> <li>• ML370 G4, ML370 G5</li> <li>• ML570 G3, ML570 G4</li> <li>• BL460c</li> <li>• BL480c</li> <li>• BL465c</li> <li>• BL685c</li> </ul> <p><b>*Note:</b> Servers can be used homogeneously or heterogeneously within a cluster.</p> <p><b>^Note:</b> Supports the FC Mezzanine card only.</p> <p><b>^^Note:</b> Supports the FC Balcony card only.</p> <p><b>^^^Note:</b> Supports the FC Adapter Card BL20p G3</p> <p><b>^^^Note:</b> Supports the HPBALCF 105</p> <p><b>Server Software:</b> <a href="#">SmartStart</a> Ver: 8.00</p>	<p><b>HBA Family 1</b> StorPort Driver: 7-2.00a12 FW: 1.91a5 BIOS: 1.71a1 (5.02a1)</p> <ul style="list-style-type: none"> <li>• <a href="#">FCA2404</a></li> <li>• <a href="#">FCA2404DC</a></li> <li>• <a href="#">A7387A</a></li> <li>• <a href="#">A7388A</a></li> </ul> <p><b>HBA Family 2</b> StorPort Driver: 7-2.00a12 FW: 1.91a5 BIOS: 1.71a0 (5.02a1)</p> <ul style="list-style-type: none"> <li>• <a href="#">E-FC Balcony Card</a> <sup>^^</sup></li> <li>• <a href="#">E-FC Adapter Card</a> <sup>^^^</sup></li> </ul> <p><sup>^^</sup>For the BL25p, BL35p, &amp; BL45p use E-FC Balcony Card. <sup>^^^</sup>For the BL20p G3 use E-FC Adapter Card</p> <p><b>HBA Family 3</b> StorPort Driver: 9.1.3.18 FW: Loaded from Driver BIOS FC Balcony: 1.48 BIOS: 1.45</p> <ul style="list-style-type: none"> <li>• <a href="#">FCA2214</a></li> <li>• <a href="#">FCA2214DC</a></li> <li>• <a href="#">FC Balcony card</a></li> <li>• <a href="#">FC Mezz card</a> <sup>^</sup></li> </ul> <p><sup>^</sup>For the BL20p G3 use: BIOS: 1.45 bl20p G3</p> <p><b>HBA Family 4</b> StorPort Driver: 9.1.3.18 FW: Loaded from Driver BIOS: 1.48</p> <ul style="list-style-type: none"> <li>• <a href="#">HPBALCF105</a> for BL25p, BL45p</li> </ul> <p><b>HBA Family 5</b> StorPort Driver: 7-2.00a12 FW: 2.70a5 BIOS: 1.71a1 (5.02a1)</p> <ul style="list-style-type: none"> <li>• <a href="#">FC2142</a></li> <li>• <a href="#">FC2242</a></li> </ul> <p><b>HBA Family 6</b> StorPort Driver: 7-2.00a12 FW: 2.70a5 BIOS: 1.71a1 (5.02a1)</p> <ul style="list-style-type: none"> <li>• <a href="#">FC2143</a></li> <li>• <a href="#">FC2243</a></li> </ul> <p><b>HBA Family 7</b> StorPort Driver: 7-2.00a12 FW: 2.72a2 BIOS: 3.00a4 (6.00a2)</p> <ul style="list-style-type: none"> <li>• <a href="#">LPe1105</a></li> </ul>	<p><a href="#">Secure Path</a> Ver: 4.0c SP2-9</p>	<p><a href="#">StorageWorks MSA1500cs</a> Storage Controller FW ver: 5.20</p>	<p><b>B-Series</b> StorageWorks SAN Switches (8/16 ports 2GB) FW: 5.3.1a</p> <ul style="list-style-type: none"> <li>• <a href="#">SAN Switch 2/32</a></li> <li>• <a href="#">SAN Switch 2/8V</a></li> <li>• <a href="#">SAN Switch 2/16V</a></li> <li>• <a href="#">SAN Switch 2/16N</a></li> <li>• <a href="#">FF</a></li> <li>• <a href="#">SAN Director 2/128</a></li> </ul> <p>StorageWorks SAN Switches (&gt;32 ports) FW: 5.0.5f</p> <ul style="list-style-type: none"> <li>• <a href="#">Core Switch 2/64</a></li> </ul> <p>StorageWorks SAN Switches (4GB) FW: 6.1.0c</p> <ul style="list-style-type: none"> <li>• <a href="#">4/8 SAN Switch</a></li> <li>• <a href="#">4/16 SAN Switch</a></li> <li>• <a href="#">4/32 SAN Switch</a></li> <li>• <a href="#">4/32B SAN Switch</a></li> <li>• <a href="#">4/256 SAN Director</a></li> </ul> <p><b>M-Series</b> StorageWorks Director and Edge Switches FW: 09.06.02</p> <ul style="list-style-type: none"> <li>• <a href="#">Director 2/64</a></li> <li>• <a href="#">Director 2/140</a></li> <li>• <a href="#">Edge Switch 2/12</a></li> <li>• <a href="#">Edge Switch 2/24</a></li> <li>• <a href="#">Edge Switch 2/32</a></li> </ul> <p><b>C-Series</b> Cisco Switches FW: 3.3(1a)</p> <ul style="list-style-type: none"> <li>• <a href="#">MDS 9120</a></li> <li>• <a href="#">MDS 9140</a></li> <li>• <a href="#">MDS 9216</a></li> <li>• <a href="#">MDS 9506</a></li> <li>• <a href="#">MDS 9509</a></li> <li>• <a href="#">MDS 9513</a></li> </ul> <p><b>^^Note:</b> Not supported with BL server line.</p> <p><b>*Note:</b> BL30p server supported with B-series switches only.</p>	<p><a href="#">Product Page</a></p> <p><a href="#">Supporting Documentation</a></p> <p><a href="#">MSCS Support Matrix - archive</a></p>

		<p><b><a href="#">HBA Family 8</a></b>  <b>StorPort Driver:</b> 9.1.3.18  <b>FW:</b> Loaded from driver  <b>BIOS:</b> 1.26 (1.64)</p> <ul style="list-style-type: none"> <li>• <a href="#">FC1143</a></li> <li>• <a href="#">FC1243</a></li> </ul> <p><b><a href="#">HBA Family 9</a></b>  <b>StorPort Driver:</b> 9.1.3.18  <b>FW:</b> Loaded from driver  <b>BIOS:</b> 1.26 (1.64)</p> <ul style="list-style-type: none"> <li>• <a href="#">QMH2426</a></li> </ul> <p><b><a href="#">HBA Family 10</a></b>  <b>StorPort Driver:</b> 9.1.3.18  <b>FW:</b> Loaded from driver  <b>BIOS:</b> 1.26 (1.64)</p> <ul style="list-style-type: none"> <li>• <a href="#">FC1142</a></li> <li>• <a href="#">FC1242</a></li> </ul> <p><b>*Note 1:</b> HBAs must be used homogeneously within a cluster; but can be mixed if they are from the same HBA family as identified above.</p> <p><b>*Note 2:</b> Refer to Server QuickSpecs for confirmation on supported HBAs.</p> <p><b>*Note 3:</b> Check Microsoft site for hotfixes.</p>					
--	--	--	--	--	--	--	--

July 2008

Config	Supported Servers*	Host Bus Adapters (HBAs)*	Multi Path Software	Storage Information*	Interconnects (Switches)*	Other
Windows Server 2003 x64 EE SP2	<p>Max supported nodes = 8</p> <p>ProLiant</p> <ul style="list-style-type: none"> <li>• BL20p G3<sup>^^</sup></li> <li>• BL35p<sup>^^</sup></li> <li>• BL25p<sup>^^^</sup></li> <li>• BL45p<sup>^^^</sup></li> <li>• DL360 G4, DL360 G5</li> <li>• DL360 G4p</li> <li>• DL365</li> <li>• DL380 G4, DL380 G5</li> <li>• DL580 G3, DL580 G4, DL580 G5</li> <li>• DL585, DL585 G2</li> <li>• DL385, DL385 G2</li> <li>• ML370 G4, ML370 G5</li> <li>• ML570 G3, ML570 G4</li> <li>• BL460c</li> <li>• BL480c</li> <li>• BL465c</li> <li>• BL685c</li> </ul> <p><b>*Note:</b> Servers can be used homogeneously or heterogeneously within a cluster.</p> <p><b>^Note:</b> Supports the FC Mezzanine card only.</p> <p><b>^^Note:</b> Supports the FC Balcony card only.</p> <p><b>^^^Note:</b> Supports the FC Adapter Card BL20p G3</p> <p><b>^^^Note:</b> Supports the HPBALCF 105</p> <p><b>Server Software:</b>  <a href="#">SmartStart</a>  Ver: 8.80  (Install non-RBSU servers using SmartStart 5.5 and then apply PSP 7.4)</p>	<p><b>HBA Family 1</b>  <b>StorPort Driver:</b> 7-2.00a12  <b>FW:</b> 1.91a5  <b>BIOS:</b> 1.71a0 (5.02a1)</p> <ul style="list-style-type: none"> <li>• <a href="#">FCA2404</a></li> <li>• <a href="#">FCA2404DC</a></li> <li>• <a href="#">A7387A</a></li> <li>• <a href="#">A7388A</a></li> </ul> <p><b>HBA Family 2</b>  <b>StorPort Driver:</b> 7-2.00a12  <b>FW:</b> 1.91a5  <b>BIOS:</b> 1.71a0 (5.02a1)</p> <ul style="list-style-type: none"> <li>• <a href="#">E-FC Balcony Card</a> ^^</li> <li>• <a href="#">E-FC Adapter Card</a> ^^</li> </ul> <p><sup>^^</sup>For the BL25p, BL35p, &amp; BL45p use E-FC Balcony Card.  <sup>^^^</sup>For the BL20p G3 use E-FC Adapter Card</p> <p><b>HBA Family 3</b>  <b>StorPort Driver:</b> 9.1.3.18  <b>FW:</b> Loaded from Driver  <b>BIOS FC Balcony:</b> 1.48  <b>BIOS:</b> 1.45</p> <ul style="list-style-type: none"> <li>• <a href="#">FCA2214</a></li> <li>• <a href="#">FCA2214DC</a></li> <li>• <a href="#">FC Balcony card</a></li> <li>• <a href="#">FC Mezz card</a> ^</li> </ul> <p><b>^For the BL20p G3 use:</b>  <b>BIOS:</b> 1.45 bl20p G3</p> <p><b>HBA Family 4</b>  <b>StorPort Driver:</b> 9.1.3.18  <b>FW:</b> Loaded from Driver  <b>BIOS:</b> 1.48</p> <ul style="list-style-type: none"> <li>• <a href="#">HPBALCF105</a> for BL25p, BL45p</li> </ul> <p><b>HBA Family 5</b>  <b>StorPort Driver:</b> 7-2.00a12  <b>FW:</b> 2.70a5  <b>BIOS:</b> 1.71a0 (5.02a1)</p> <ul style="list-style-type: none"> <li>• <a href="#">FC2142</a></li> <li>• <a href="#">FC2242</a></li> </ul> <p><b>HBA Family 6</b>  <b>StorPort Driver:</b> 7-2.00a12  <b>FW:</b> 2.70a5  <b>BIOS:</b> 1.71a0 (5.02a1)</p> <ul style="list-style-type: none"> <li>• <a href="#">FC2143</a></li> <li>• <a href="#">FC2243</a></li> </ul> <p><b>HBA Family 7</b>  <b>StorPort Driver:</b> 7-2.00a12  <b>FW:</b> 2.70a5  <b>BIOS:</b> 3.00a4 (6.00a2)</p> <ul style="list-style-type: none"> <li>• <a href="#">LPe1105</a></li> </ul> <p><b>HBA Family 8</b>  <b>StorPort Driver:</b> 9.1.3.18  <b>FW:</b> Loaded from driver  <b>BIOS:</b> 1.26 (1.64)</p> <ul style="list-style-type: none"> <li>• <a href="#">FC1143</a></li> <li>• <a href="#">FC1243</a></li> </ul> <p><b>HBA Family 9</b>  <b>StorPort Driver:</b> 9.1.3.18  <b>FW:</b> Loaded from driver  <b>BIOS:</b> 1.26 (1.64)</p>	<p><a href="#">Secure Path</a>  <b>Ver:</b> 4.0c SP2-9</p>	<p><a href="#">StorageWorks MSA1500cs</a>  <b>Storage Controller FW</b>  ver: 5.20</p>	<p><b>B-Series</b>  StorageWorks SAN Switches (8/16 ports 2GB)  <b>FW:</b> 5.3.0d</p> <ul style="list-style-type: none"> <li><a href="#">SAN Switch 2/32</a></li> <li><a href="#">SAN Switch 2/8V</a></li> <li><a href="#">SAN Switch 2/16V</a></li> <li><a href="#">SAN Switch 2/16N</a></li> <li><a href="#">FF</a></li> <li><a href="#">SAN Director 2/128</a></li> </ul> <p>StorageWorks SAN Switches (&gt;32 ports)  <b>FW: 5.0.5f</b></p> <ul style="list-style-type: none"> <li><a href="#">Core Switch 2/64</a></li> </ul> <p>StorageWorks SAN Switches (4GB)  <b>FW:</b> 5.3.0d</p> <ul style="list-style-type: none"> <li>• <a href="#">4/8 SAN Switch</a></li> <li>• <a href="#">4/16 SAN Switch</a></li> <li>• <a href="#">4/32 SAN Switch</a></li> <li>• <a href="#">4/32B SAN Switch</a></li> <li>• <a href="#">4/256 SAN Director</a></li> </ul> <p><b>M-Series</b>  StorageWorks Director and Edge Switches  <b>FW:</b> 09.03.00</p> <ul style="list-style-type: none"> <li><a href="#">Director 2/64</a></li> <li><a href="#">Director 2/140</a></li> <li><a href="#">Edge Switch 2/12</a></li> <li><a href="#">Edge Switch 2/24</a></li> <li><a href="#">Edge Switch 2/32</a></li> </ul> <p><b>C-Series</b>  Cisco Switches  <b>FW:</b> 3.2(2c)</p> <ul style="list-style-type: none"> <li>• <a href="#">MDS 9120</a></li> <li>• <a href="#">MDS 9140</a></li> <li>• <a href="#">MDS 9216</a></li> <li>• <a href="#">MDS 9506</a></li> <li>• <a href="#">MDS 9509</a></li> <li>• <a href="#">MDS 9513</a></li> </ul> <p><b>^^Note:</b> Not supported with BL server line.</p> <p><b>*Note:</b> BL30p server supported with B-series switches only.</p>	<p><a href="#">Product Page</a></p> <p><a href="#">Supporting Documentation</a></p> <p><a href="#">MSCS Support Matrix - archive</a></p>

		<ul style="list-style-type: none"><li>• <a href="#">QMH2426</a></li></ul> <p><b>HBA Family 10</b></p> <p><b>StorPort Driver:</b> 9.1.3.18 <b>FW:</b> Loaded from driver <b>BIOS:</b> 1.16 (1.41)</p> <ul style="list-style-type: none"><li>• <a href="#">FC1142</a></li><li>• <a href="#">FC1242</a></li></ul> <p><b>*Note 1:</b> HBAs must be used homogeneously within a cluster; but can be mixed if they are from the same HBA family as identified above.</p> <p><b>*Note 2:</b> Refer to Server QuickSpecs for confirmation on supported HBAs.</p> <p><b>*Note 3:</b> Check Microsoft site for hotfixes.</p>					January 2008
--	--	--	--	--	--	--	--------------

Config	Supported Servers*	Host Bus Adapters (HBAs)*	Multi Path Software	Storage Information*	Interconnects (Switches)*	Other
Windows Server 2003, x64 Editions SP2	<p>Max supported nodes = 8</p> <p>ProLiant</p> <ul style="list-style-type: none"> <li>• BL20p G3<sup>^^</sup></li> <li>• BL35p<sup>^^</sup></li> <li>• BL25p<sup>^^^</sup></li> <li>• BL45p<sup>^^^</sup></li> <li>• DL360 G4, DL360 G5</li> <li>• DL360 G4p</li> <li>• DL365</li> <li>• DL380 G4, DL380 G5</li> <li>• DL580 G3, DL580 G4</li> <li>• DL585, DL585 G2</li> <li>• DL385, DL385 G2</li> <li>• ML370 G4, ML370 G5</li> <li>• ML570 G3, ML570 G4</li> <li>• BL460c</li> <li>• BL480c</li> <li>• BL465c</li> <li>• BL685c</li> </ul> <p><b>*Note:</b> Servers can be used homogeneously or heterogeneously within a cluster.</p> <p><b>^Note:</b> Supports the FC Mezzanine card only.</p> <p><b>^^Note:</b> Supports the FC Balcony card only.</p> <p><b>^^^Note:</b> Supports the FC Adapter Card BL20p G3</p> <p><b>^^^Note:</b> Supports the HPBALCF 105</p> <p><b>Server Software:</b>  <b>SmartStart</b>  <b>Ver:</b> 8.80            (Install non-RBSU servers using SmartStart 5.5 and then apply PSP 7.4)</p>	<p><b>HBA Family 1</b>  <b>StorPort Driver:</b> 7-1.20a7  <b>FW:</b> 1.91a5  <b>BIOS:</b> 1.71a0 (5.02a1)</p> <ul style="list-style-type: none"> <li>• <a href="#">FCA2404</a></li> <li>• <a href="#">FCA2404DC</a></li> <li>• <a href="#">A7387A</a></li> <li>• <a href="#">A7388A</a></li> </ul> <p><b>HBA Family 2</b>  <b>StorPort Driver:</b> 7-1.20a7  <b>FW:</b> 1.91a5  <b>BIOS:</b> 1.71a0 (5.02a1)</p> <ul style="list-style-type: none"> <li>• <a href="#">E-FC Balcony Card</a> ^^</li> <li>• <a href="#">E-FC Adapter Card</a> ^^</li> </ul> <p>^^For the BL25p, BL35p, &amp; BL45p use E-FC Balcony Card.            ^^For the BL20p G3 use E-FC Adapter Card</p> <p><b>HBA Family 3</b>  <b>StorPort Driver:</b> 9.1.3.16  <b>FW:</b> Loaded from Driver  <b>BIOS FC Balcony:</b> 1.48  <b>BIOS:</b> 1.45</p> <ul style="list-style-type: none"> <li>• <a href="#">FCA2214</a></li> <li>• <a href="#">FCA2214DC</a></li> <li>• <a href="#">FC Balcony card</a></li> <li>• <a href="#">FC Mezz card</a> ^</li> </ul> <p><b>^For the BL20p G3 use:</b>  <b>BIOS:</b> 1.45 bl20p G3</p> <p><b>HBA Family 4</b>  <b>StorPort Driver:</b> 9.1.3.16  <b>FW:</b> Loaded from Driver  <b>BIOS:</b> 1.48</p> <ul style="list-style-type: none"> <li>• <a href="#">HPBALCF105</a> for BL25p, BL45p</li> </ul> <p><b>HBA Family 5</b>  <b>StorPort Driver:</b> 7-1.20a7  <b>FW:</b> 2.70a5  <b>BIOS:</b> 1.71a0 (5.02a1)</p> <ul style="list-style-type: none"> <li>• <a href="#">FC2142</a></li> <li>• <a href="#">FC2242</a></li> </ul> <p><b>HBA Family 6</b>  <b>StorPort Driver:</b> 7-1.20a7  <b>FW:</b> 2.70a5  <b>BIOS:</b> 1.71a0 (5.02a1)</p> <ul style="list-style-type: none"> <li>• <a href="#">FC2143</a></li> <li>• <a href="#">FC2243</a></li> </ul> <p><b>HBA Family 7</b>  <b>StorPort Driver:</b> 7-1.20a7  <b>FW:</b> 2.70a5  <b>BIOS:</b> 3.00a4 (6.00a2)</p> <ul style="list-style-type: none"> <li>• <a href="#">LPe1105</a></li> </ul> <p><b>HBA Family 8</b>  <b>StorPort Driver:</b> 9.1.3.16  <b>FW:</b> 4.00.90  <b>BIOS:</b> 1.26 (1.64)</p> <ul style="list-style-type: none"> <li>• <a href="#">FC1143</a></li> <li>• <a href="#">FC1243</a></li> </ul> <p><b>HBA Family 9</b>  <b>StorPort Driver:</b> 9.1.3.16  <b>FW:</b> 4.00.90  <b>BIOS:</b> 1.26 (1.64)</p>	Secure Path Ver: 4.0c SP2-9	StorageWorks <a href="#">MSA1500cs</a> Storage Controller FW ver: 5.20	<p><b>B-Series</b>            StorageWorks SAN Switches (8/16 ports 2GB)  <b>FW:</b> 5.2.1b</p> <ul style="list-style-type: none"> <li>• <a href="#">SAN Switch 2/32</a></li> <li>• <a href="#">SAN Switch 2/8V</a></li> <li>• <a href="#">SAN Switch 2/16V</a></li> <li>• <a href="#">SAN Switch 2/16N</a></li> <li>• <a href="#">FF</a></li> <li>• <a href="#">SAN Director 2/128</a></li> </ul> <p>StorageWorks SAN Switches (&gt;32 ports)  <b>FW:</b> 5.0.5d</p> <ul style="list-style-type: none"> <li>• <a href="#">Core Switch 2/64</a></li> </ul> <p>StorageWorks SAN Switches (4GB)  <b>FW:</b> 5.3.0b</p> <ul style="list-style-type: none"> <li>• <a href="#">4/8 SAN Switch</a></li> <li>• <a href="#">4/16 SAN Switch</a></li> <li>• <a href="#">4/32 SAN Switch</a></li> <li>• <a href="#">4/256 SAN Director</a></li> </ul> <p><b>M-Series</b>            StorageWorks Director and Edge Switches  <b>FW:</b> 09.03.00</p> <ul style="list-style-type: none"> <li>• <a href="#">Director 2/64</a></li> <li>• <a href="#">Director 2/140</a></li> <li>• <a href="#">Edge Switch 2/12</a></li> <li>• <a href="#">Edge Switch 2/24</a></li> <li>• <a href="#">Edge Switch 2/32</a></li> </ul> <p><b>C-Series</b>            Cisco Switches  <b>FW:</b> 3.2(1a)</p> <ul style="list-style-type: none"> <li>• <a href="#">MDS 9120</a></li> <li>• <a href="#">MDS 9140</a></li> <li>• <a href="#">MDS 9216</a></li> <li>• <a href="#">MDS 9506</a></li> <li>• <a href="#">MDS 9509</a></li> </ul> <p><b>^^Note:</b> Not supported with BL server line.</p> <p><b>*Note:</b> BL30p server supported with B-series switches only.</p>	<p><a href="#">Product Page</a></p> <p><a href="#">Supporting Documentation</a></p> <p><a href="#">MSCS Support Matrix - archive</a></p>

		<ul style="list-style-type: none"> <li>• <a href="#">QMH2426</a></li> </ul> <p><b><u>HBA Family 10</u></b></p> <p><b>StorPort Driver:</b> 9.1.3.16  <b>FW:</b> Loaded from driver  <b>BIOS:</b> 1.16 (1.41)</p> <ul style="list-style-type: none"> <li>• <a href="#">FC1142</a></li> <li>• <a href="#">FC1242</a></li> </ul> <p><b>*Note 1:</b> HBAs must be used homogeneously within a cluster; but can be mixed if they are from the same HBA family as identified above.</p> <p><b>*Note 2:</b> Refer to Server QuickSpecs for confirmation on supported HBAs.</p> <p><b>*Note 3:</b> Check Microsoft site for hotfixes.</p>					November 2007
--	--	--	--	--	--	--	---------------

Config	Supported Servers*	Host Bus Adapters (HBAs)*	Multi Path Software	Storage Information*	Interconnects (Switches)*	Other
Windows Server 2003, x64 Editions SP2	<p>Max supported nodes = 8</p> <p>ProLiant</p> <ul style="list-style-type: none"> <li>• BL20p G3^^</li> <li>• BL35p^^</li> <li>• BL25p^^^</li> <li>• BL45p^^^</li> <li>• DL360 G4, DL360 G5</li> <li>• DL360 G4p</li> <li>• DL365</li> <li>• DL380 G4, DL380 G5</li> <li>• DL580 G3, DL580 G4</li> <li>• DL585, DL585 G2</li> <li>• DL385, DL385 G2</li> <li>• ML370 G4, ML370 G5</li> <li>• ML570 G3, ML570 G4</li> <li>• BL460c</li> <li>• BL480c</li> <li>• BL465c</li> <li>• BL685c</li> </ul> <p><b>*Note:</b> Servers can be used homogeneously or heterogeneously within a cluster.</p> <p><b>^Note:</b> Supports the FC Mezzanine card only.</p> <p><b>^^Note:</b> Supports the FC Balcony card only.</p> <p><b>^^^Note:</b> Supports the FC Adapter Card BL20p G3</p> <p><b>^^^^Note:</b> Supports the HPBALCF 105</p> <p><b>Server Software:</b>  <b>SmartStart</b>  <b>Ver:</b> 7.70            (Install non-RBSU servers using SmartStart 5.5 and then apply PSP 7.4)</p>	<p><b>HBA Family 1</b>  <b>StorPort Driver:</b> 7-1.20a7  <b>FW:</b> 1.91a5  <b>BIOS:</b> 1.71a0</p> <ul style="list-style-type: none"> <li>• <a href="#">FCA2404</a></li> <li>• <a href="#">FCA2404DC</a></li> <li>• <a href="#">A7387A</a></li> <li>• <a href="#">A7388A</a></li> </ul> <p><b>HBA Family 2</b>  <b>StorPort Driver:</b> 7-1.20a7  <b>FW:</b> 1.91a5  <b>BIOS:</b> 1.71a0</p> <ul style="list-style-type: none"> <li>• <a href="#">E-FC Balcony Card</a> ^^</li> <li>• <a href="#">E-FC Adapter Card</a> ^^^</li> </ul> <p>^^ For the BL25p, BL35p, &amp; BL45p use E-FC Balcony Card.            ^^^ For the BL20p G3 use E-FC Adapter Card</p> <p><b>HBA Family 3</b>  <b>StorPort Driver:</b> 9.1.3.16  <b>FW:</b> NA  <b>BIOS FC Mezz/Balcony:</b> 1.48  <b>BIOS FCA2214/2214DC:</b> 1.45</p> <ul style="list-style-type: none"> <li>• <a href="#">FCA2214</a></li> <li>• <a href="#">FCA2214DC</a></li> <li>• <a href="#">FC Balcony card</a></li> <li>• <a href="#">FC Mezz card</a> ^</li> </ul> <p><b>^For the BL20p G3 use:</b>  <b>BIOS:</b> 1.45 bl20p G3</p> <p><b>HBA Family 4</b>  <b>StorPort Driver:</b> 9.1.3.16  <b>FW:</b> N/A  <b>BIOS:</b> 1.48</p> <ul style="list-style-type: none"> <li>• <a href="#">HPBALCF105</a> for BL25p, BL45p</li> </ul> <p><b>HBA Family 5</b>  <b>StorPort Driver:</b> 7-1.20a7  <b>FW:</b> 2.50a6  <b>BIOS:</b> 1.71a0</p> <ul style="list-style-type: none"> <li>• <a href="#">FC2142</a></li> <li>• <a href="#">FC2242</a></li> </ul> <p><b>HBA Family 6</b>  <b>StorPort Driver:</b> 7-1.20a7  <b>FW:</b> 2.50a2  <b>BIOS:</b> 1.71a0</p> <ul style="list-style-type: none"> <li>• <a href="#">FC2143</a></li> <li>• <a href="#">FC2243</a></li> </ul> <p><b>HBA Family 7</b>  <b>StorPort Driver:</b> 7-1.20a7  <b>FW:</b> 2.50a8  <b>BIOS:</b> 3.00a4</p> <ul style="list-style-type: none"> <li>• <a href="#">LPe1105</a></li> </ul> <p><b>HBA Family 8</b>  <b>StorPort Driver:</b> 9.1.3.16  <b>FW:</b> Loaded from driver  <b>BIOS:</b> 1.16</p> <ul style="list-style-type: none"> <li>• <a href="#">FC1143</a></li> <li>• <a href="#">FC1243</a></li> </ul> <p><b>HBA Family 9</b>  <b>StorPort Driver:</b> 9.1.3.11  <b>FW:</b> Loaded from driver  <b>BIOS:</b> 1.26</p>	Secure Path Ver: 4.0c SP2-9	StorageWorks <a href="#">MSA1500cs</a> Storage Controller FW ver: 5.20	<p><b>B-Series</b>            StorageWorks SAN Switches (8/16 ports 2GB)  <b>FW:</b> 3.2.1b</p> <ul style="list-style-type: none"> <li>• <a href="#">MSA SAN Switch 2/8^</a></li> <li>• <a href="#">SAN Switch 2/16</a></li> </ul> <p><b>FW:</b> 5.2.0b</p> <ul style="list-style-type: none"> <li>• <a href="#">SAN Switch 2/32</a></li> <li>• <a href="#">SAN Switch 2/8V</a></li> <li>• <a href="#">SAN Switch 2/16V</a></li> <li>• <a href="#">SAN Switch 2/16N FF</a></li> <li>• <a href="#">SAN Director 2/128</a></li> </ul> <p>StorageWorks SAN Switches (&gt;32 ports )  <b>FW:</b> 5.0.5c</p> <p><a href="#">Core Switch 2/64</a></p> <p>StorageWorks SAN Switches (4GB )  <b>FW:</b> 5.2.0b</p> <ul style="list-style-type: none"> <li>• <a href="#">4/8 SAN Switch</a></li> <li>• <a href="#">4/16 SAN Switch</a></li> <li>• <a href="#">4/32 SAN Switch</a></li> <li>• <a href="#">4/256 SAN Director</a></li> </ul> <p><b>M-Series</b>            StorageWorks Director and Edge Switches  <b>FW:</b> 09.00.00</p> <ul style="list-style-type: none"> <li>• <a href="#">Director 2/64</a></li> <li>• <a href="#">Director 2/140</a></li> <li>• <a href="#">Edge Switch 2/12</a></li> <li>• <a href="#">Edge Switch 2/24</a></li> <li>• <a href="#">Edge Switch 2/32</a></li> </ul> <p><b>C-Series</b>            Cisco Switches  <b>FW:</b> 3.1(2a)</p> <ul style="list-style-type: none"> <li>• <a href="#">MDS 9120</a></li> <li>• <a href="#">MDS 9140</a></li> <li>• <a href="#">MDS 9216</a></li> <li>• <a href="#">MDS 9506</a></li> <li>• <a href="#">MDS 9509</a></li> </ul> <p><b>^^Note:</b> Not supported with BL server line.</p> <p><b>*Note:</b> BL30p server supported with B-series switches only.</p>	<p><a href="#">Product Page</a></p> <p><a href="#">Supporting Documentation</a></p> <p><a href="#">MSCS Support Matrix - archive</a></p>

		<ul style="list-style-type: none"><li>• <a href="#">QMH2426</a></li></ul> <p><b>HBA Family 10</b> StorPort Driver: 9.1.3.16 FW: Loaded from driver BIOS: 1.16</p> <ul style="list-style-type: none"><li>• <a href="#">FC1142</a></li><li>• <a href="#">FC1242</a></li></ul> <p><b>*Note 1:</b> HBAs must be used homogeneously within a cluster; but can be mixed if they are from the same HBA family as identified above.</p> <p><b>*Note 2:</b> Refer to Server QuickSpecs for confirmation on supported HBAs.</p> <p><b>*Note 3:</b> Check Microsoft site for hotfixes.</p>					April 2007
--	--	---	--	--	--	--	------------



Config	Supported Servers*	Host Bus Adapters (HBAs)*	Multi Path Software		Interconnects (Switches)*	Other
Windows Server 2003, x64 Editions	<p>Max supported nodes = 8</p> <p>ProLiant</p> <ul style="list-style-type: none"> <li>• BL20p G3^^</li> <li>• BL35p^^</li> <li>• BL25p^^^</li> <li>• BL45p^^^</li> <li>• DL360 G4, DL360 G5</li> <li>• DL360 G4p</li> <li>• DL365</li> <li>• DL380 G4, DL380 G5</li> <li>• DL580 G3, DL580 G4</li> <li>• DL585, DL585 G2</li> <li>• DL385, DL385 G2</li> <li>• ML370 G4, ML370 G5</li> <li>• ML570 G3, ML570 G4</li> <li>• BL460c</li> <li>• BL480c</li> <li>• BL465c</li> <li>• BL685c</li> </ul> <p><b>*Note:</b> Servers can be used homogeneously or heterogeneously within a cluster.</p> <p><b>^Note:</b> Supports the FC Mezzanine card only.</p> <p><b>^^Note:</b> Supports the FC Balcony card only.</p> <p><b>^^^Note:</b> Supports the FC Adapter Card BL20p G3</p> <p><b>^^^Note:</b> Supports the HPBALCF 105</p> <p><b>Server Software:</b>  <b>SmartStart</b>  <b>Ver:</b> 7.70            (Install non-RBSU servers using SmartStart 5.5 and then apply PSP 7.4)</p>	<p><b>HBA Family 1</b>  <b>StorPort Driver:</b> 7-1.20a7  <b>FW:</b> 1.91a5  <b>BIOS:</b> 1.71a0</p> <ul style="list-style-type: none"> <li>• <a href="#">FCA2404</a></li> <li>• <a href="#">FCA2404DC</a></li> <li>• <a href="#">A7387A</a></li> <li>• <a href="#">A7388A</a></li> </ul> <p><b>HBA Family 2</b>  <b>StorPort Driver:</b> 7-1.20a7  <b>FW:</b> 1.91a5  <b>BIOS:</b> 1.71a0</p> <ul style="list-style-type: none"> <li>• <a href="#">E-FC Balcony Card</a> ^^</li> <li>• <a href="#">E-FC Adapter Card</a> ^^</li> </ul> <p>^^ For the BL25p, BL35p, &amp; BL45p use E-FC Balcony Card.            ^^ For the BL20p G3 use E-FC Adapter Card</p> <p><b>HBA Family 3</b>  <b>StorPort Driver:</b> 9.1.3.16  <b>FW:</b> NA  <b>BIOS FC Mezz/Balcony:</b> 1.48  <b>BIOS FCA2214/2214DC:</b> 1.45</p> <ul style="list-style-type: none"> <li>• <a href="#">FCA2214</a></li> <li>• <a href="#">FCA2214DC</a></li> <li>• <a href="#">FC Balcony card</a></li> <li>• <a href="#">FC Mezz card</a> ^</li> </ul> <p><b>^For the BL20p G3 use:</b>  <b>BIOS:</b> 1.45 bl20p G3</p> <p><b>HBA Family 4</b>  <b>StorPort Driver:</b> 9.1.3.16  <b>FW:</b> N/A  <b>BIOS:</b> 1.48</p> <ul style="list-style-type: none"> <li>• <a href="#">HPBALCF105</a> for BL25p, BL45p</li> </ul> <p><b>HBA Family 5</b>  <b>StorPort Driver:</b> 7-1.20a7  <b>FW:</b> 2.50a6  <b>BIOS:</b> 1.71a0</p> <ul style="list-style-type: none"> <li>• <a href="#">FC2142</a></li> <li>• <a href="#">FC2242</a></li> </ul> <p><b>HBA Family 6</b>  <b>StorPort Driver:</b> 7-1.20a7  <b>FW:</b> 2.50a2  <b>BIOS:</b> 1.71a0</p> <ul style="list-style-type: none"> <li>• <a href="#">FC2143</a></li> <li>• <a href="#">FC2243</a></li> </ul> <p><b>HBA Family 7</b>  <b>StorPort Driver:</b> 7-1.20a7  <b>FW:</b> 2.50a8  <b>BIOS:</b> 3.00a4</p> <ul style="list-style-type: none"> <li>• <a href="#">LPe1105</a></li> </ul> <p><b>HBA Family 8</b>  <b>StorPort Driver:</b> 9.1.3.16  <b>FW:</b> Loaded from driver  <b>BIOS:</b> 1.16</p> <ul style="list-style-type: none"> <li>• <a href="#">FC1143</a></li> <li>• <a href="#">FC1243</a></li> </ul> <p><b>HBA Family 9</b>  <b>StorPort Driver:</b> 9.1.3.11  <b>FW:</b> Loaded from driver  <b>BIOS:</b> 1.26</p>	<p><b>Secure Path</b>  <b>Ver:</b> 4.0c SP2-1</p>	<p><b>StorageWorks</b>  <b>MSA1500</b>  <b>Storage Controller FW:</b> v5.10</p>	<p><b>B-Series</b>            StorageWorks SAN Switches (8/16 ports 2GB)  <b>FW:</b> 3.2.1b</p> <p><a href="#">MSA SAN Switch 2/8^</a>  <a href="#">SAN Switch 2/16</a></p> <p><b>FW:</b> 5.2.0b</p> <p><a href="#">SAN Switch 2/32</a>  <a href="#">SAN Switch 2/8V</a>  <a href="#">SAN Switch 2/16V</a>  <a href="#">SAN Switch 2/16N</a>  <a href="#">FF</a>  <a href="#">SAN Director 2/128</a></p> <p>StorageWorks SAN Switches (&gt;32 ports )  <b>FW:</b> 5.0.5c</p> <p><a href="#">Core Switch 2/64</a></p> <p>StorageWorks SAN Switches (4GB )  <b>FW:</b> 5.2.0b</p> <ul style="list-style-type: none"> <li>• <a href="#">4/8 SAN Switch</a></li> <li>• <a href="#">4/16 SAN Switch</a></li> <li>• <a href="#">4/32 SAN Switch</a></li> <li>• <a href="#">4/256 SAN Director</a></li> </ul> <p><b>M-Series</b>            StorageWorks Director and Edge Switches  <b>FW:</b> 09.00.00</p> <p><a href="#">Director 2/64</a>  <a href="#">Director 2/140</a>  <a href="#">Edge Switch 2/12</a>  <a href="#">Edge Switch 2/24</a>  <a href="#">Edge Switch 2/32</a></p> <p><b>C-Series</b>            Cisco Switches  <b>FW:</b> 3.1(2a)</p> <ul style="list-style-type: none"> <li>• <a href="#">MDS 9120</a></li> <li>• <a href="#">MDS 9140</a></li> <li>• <a href="#">MDS 9216</a></li> <li>• <a href="#">MDS 9506</a></li> <li>• <a href="#">MDS 9509</a></li> </ul> <p><b>^^Note:</b> Not supported with BL server line.</p> <p><b>*Note:</b> BL30p server supported with B-series switches only.</p>	<p><a href="#">Product Page</a></p> <p><a href="#">Supporting Documentation</a></p> <p><a href="#">MSCS Support Matrix - archive</a></p>

		<ul style="list-style-type: none"> <li>• <a href="#">QMH2426</a></li> </ul> <p><b>HBA Family 10</b>  <b>StorPort Driver:</b> 9.1.3.16  <b>FW:</b> Loaded from driver  <b>BIOS:</b> 1.16</p> <ul style="list-style-type: none"> <li>• <a href="#">FC1142</a></li> <li>• <a href="#">FC1242</a></li> </ul> <p><b>*Note 1:</b> HBAs must be used homogeneously within a cluster; but can be mixed if they are from the same HBA family as identified above.</p> <p><b>*Note 2:</b> Refer to Server QuickSpecs for confirmation on supported HBAs.</p> <p><b>*Note 3:</b> Check Microsoft site for hotfixes.</p>					March 2007
--	--	--	--	--	--	--	------------

Config	Supported Servers*	Host Bus Adapters (HBAs)*	Multi Path Software		Interconnects (Switches)*	Other
Windows Server 2003, x64 Editions	<p>Max supported nodes = 8</p> <p>ProLiant</p> <ul style="list-style-type: none"> <li>• BL20p G3^^^</li> <li>• BL35p^^</li> <li>• BL25p^^^^</li> <li>• BL45p^^^^</li> <li>• DL360 G4, DL360 G5</li> <li>• DL360 G4p</li> <li>• DL365</li> <li>• DL380 G4, DL380 G5</li> <li>• DL580 G3, DL580 G4</li> <li>• DL585, DL585 G2</li> <li>• DL385, DL385 G2</li> <li>• ML370 G4, ML370 G5</li> <li>• ML570 G3, ML570 G4</li> <li>• BL460c</li> <li>• BL480c</li> <li>• BL465c</li> <li>• BL685c</li> </ul> <p><b>*Note:</b> Servers can be used homogeneously or heterogeneously within a cluster.</p> <p><b>^Note:</b> Supports the FC Mezzanine card only.</p> <p><b>^^Note:</b> Supports the FC Balcony card only.</p> <p><b>^^^Note:</b> Supports the FC Adapter Card BL20p G3</p> <p><b>^^^^Note:</b> Supports the HPBALCF 105</p> <p><b>Server Software:</b>  <a href="#">SmartStart</a>  Ver: 7.60  (Install non-RBSU servers using SmartStart 5.5 and then apply PSP 7.4)</p>	<p><b>HBA Family 1</b>  <b>StorPort Driver:</b> 7-1.20a7  <b>FW:</b> 1.91a5  <b>BIOS:</b> 1.71a0</p> <ul style="list-style-type: none"> <li>• <a href="#">FCA2404</a></li> <li>• <a href="#">FCA2404DC</a></li> <li>• <a href="#">A7387A</a></li> <li>• <a href="#">A7388A</a></li> </ul> <p><b>HBA Family 2</b>  <b>StorPort Driver:</b> 7-1.20a7  <b>FW:</b> 1.91a5  <b>BIOS:</b> 1.71a0</p> <ul style="list-style-type: none"> <li>• <a href="#">E-FC Balcony Card</a> ^^</li> <li>• <a href="#">E-FC Adapter Card</a> ^^^</li> </ul> <p>^^For the BL25p, BL35p, &amp; BL45p use E-FC Balcony Card.  ^^^For the BL20p G3 use E-FC Adapter Card</p> <p><b>HBA Family 3</b>  <b>StorPort Driver:</b> 9.1.3.16  <b>FW:</b> NA  <b>BIOS:</b> 1.48</p> <ul style="list-style-type: none"> <li>• <a href="#">FCA2214</a></li> <li>• <a href="#">FCA2214DC</a></li> <li>• <a href="#">FC Balcony card</a></li> <li>• <a href="#">FC Mezz card</a> ^</li> </ul> <p><b>^For the BL20p G3 use:</b>  <b>BIOS:</b> 1.45 bl20p G3</p> <p><b>HBA Family 4</b>  <b>StorPort Driver:</b> 9.1.3.16  <b>FW:</b> N/A  <b>BIOS:</b> 1.48</p> <ul style="list-style-type: none"> <li>• <a href="#">HPBALCF105</a> for BL25p, BL45p</li> </ul> <p><b>HBA Family 5</b>  <b>StorPort Driver:</b> 7-1.20a7  <b>FW:</b> 2.50a6  <b>BIOS:</b> 1.71a0</p> <ul style="list-style-type: none"> <li>• <a href="#">FC2142</a></li> <li>• <a href="#">FC2242</a></li> </ul> <p><b>HBA Family 6</b>  <b>StorPort Driver:</b> 7-1.20a7  <b>FW:</b> 2.10a10  <b>BIOS:</b> 1.71a0</p> <ul style="list-style-type: none"> <li>• <a href="#">FC2143</a></li> <li>• <a href="#">FC2243</a></li> </ul> <p><b>HBA Family 7</b>  <b>StorPort Driver:</b> 7-1.11x1  <b>FW:</b> 2.50a8  <b>BIOS:</b> 1.70a3</p> <ul style="list-style-type: none"> <li>• <a href="#">LPe1105</a></li> </ul> <p><b>HBA Family 8</b>  <b>StorPort Driver:</b> 9.1.3.16  <b>FW:</b> Loaded from driver  <b>BIOS:</b> 1.16</p> <ul style="list-style-type: none"> <li>• <a href="#">FC1143</a></li> <li>• <a href="#">FC1243</a></li> </ul> <p><b>HBA Family 9</b>  <b>StorPort Driver:</b> 9.1.0.18  <b>FW:</b> Loaded from driver  <b>BIOS:</b> 1.16</p>	<p><a href="#">Secure Path</a>  <b>Ver:</b> 4.0c SP2-1</p>	<p><a href="#">StorageWorks MSA1000</a>  <b>Storage Controller FW:</b> v5.10</p>	<p><b>B-Series</b>  StorageWorks SAN Switches (8/16 ports 2GB)  <b>FW:</b> 3.2.1b</p> <ul style="list-style-type: none"> <li>• <a href="#">SAN Switch 2/16</a></li> </ul> <p><b>FW:</b> 5.2.0</p> <ul style="list-style-type: none"> <li>• <a href="#">SAN Switch 2/32</a></li> <li>• <a href="#">SAN Switch 2/8V</a></li> <li>• <a href="#">SAN Switch 2/16V</a></li> <li>• <a href="#">SAN Switch 2/16N FF</a></li> <li>• <a href="#">SAN Director 2/128</a></li> </ul> <p>StorageWorks SAN Switches (&gt;32 ports)  <b>FW:</b> 5.2.0</p> <ul style="list-style-type: none"> <li>• <a href="#">Core Switch 2/64</a></li> </ul> <p>StorageWorks SAN Switches (4GB)  <b>FW:</b> 5.2.0</p> <ul style="list-style-type: none"> <li>• <a href="#">4/8 SAN Switch</a></li> <li>• <a href="#">4/16 SAN Switch</a></li> <li>• <a href="#">4/32 SAN Switch</a></li> <li>• <a href="#">4/256 SAN Director</a></li> </ul> <p><b>M-Series</b>  StorageWorks Director and Edge Switches  <b>FW:</b> 09.00.00</p> <ul style="list-style-type: none"> <li>• <a href="#">Director 2/64</a></li> <li>• <a href="#">Director 2/140</a></li> <li>• <a href="#">Edge Switch 2/12</a></li> <li>• <a href="#">Edge Switch 2/24</a></li> <li>• <a href="#">Edge Switch 2/32</a></li> </ul> <p><b>C-Series</b>  Cisco Switches  <b>FW:</b> 3.0(3)</p> <ul style="list-style-type: none"> <li>• <a href="#">MDS 9120</a></li> <li>• <a href="#">MDS 9140</a></li> <li>• <a href="#">MDS 9216</a></li> <li>• <a href="#">MDS 9506</a></li> <li>• <a href="#">MDS 9509</a></li> </ul>	<p><a href="#">Product Page</a></p> <p><a href="#">Supporting Documentation</a></p> <p><a href="#">MSCS Support Matrix - archive</a></p>

		<ul style="list-style-type: none"><li>• <a href="#">QMH2426</a></li></ul> <p><b>HBA Family 10</b> <b>StorPort Driver:</b> 9.1.3.16 <b>FW:</b> Loaded from driver <b>BIOS:</b> 1.16</p> <ul style="list-style-type: none"><li>• <a href="#">FC1142</a></li><li>• <a href="#">FC1242</a></li></ul> <p><b>*Note 1:</b> HBAs must be used homogeneously within a cluster; but can be mixed if they are from the same HBA family as identified above.</p> <p><b>*Note 2:</b> Refer to Server QuickSpecs for confirmation on supported HBAs.</p> <p><b>*Note 3:</b> Check Microsoft site for hotfixes.</p>					January 2007
--	--	--	--	--	--	--	--------------