



Intel Pentium Pro Processors

CPU Speed	External (CPUCLK)	CLK1	CLK2	CPU Clock Rate			
				Internal	FREQ1	FREQ2	FREQ3 FREQ4
200 MHz	66 MHz			3 x Ext.			
200 MHz	50 MHz			4 x Ext.			
180 MHz	60 MHz			3 x Ext.			
166 MHz	66 MHz			2.5 x Ext.			
150 MHz	60 MHz			2.5 x Ext.			
150 MHz	50 MHz			3 x Ext.			

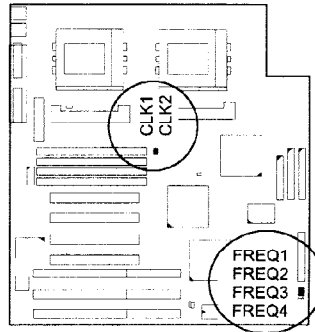

4). Install Expansion Cards

Your PN-6210 features three 16-bit ISA Bus and four 32-bit PCI Bus expansion slots.

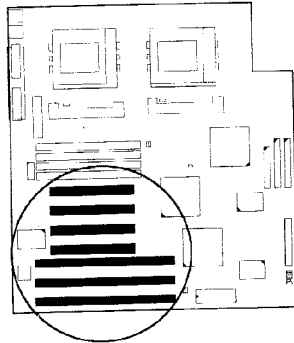

This section describes how to install an expansion card to one of your system's expansion slots. Expansion cards are printed circuit boards that, when connected to the mainboard, increase the capabilities of your system. For example, expansion cards can provide video and sound capabilities.

CAUTION :

1. Always turn the system power off before installing or removing any device.
2. Always observe static electricity precautions. See "Handling Precautions" at the start of this manual.