

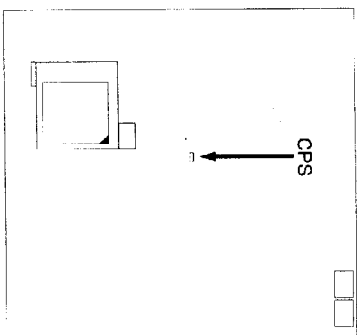








**Password Clear: CPS**

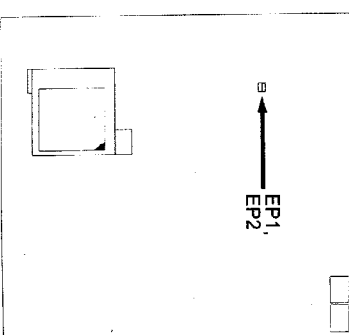
The password clear jumper lets you set the password configuration to "Enabled" or "Disabled". You may need to enable password clear if you forget your password. (Refer to Page 4-20, Clear Password)

Password Clear	CPS
Enable	
Disable (Default)	







**Flash EPROM Feature: EP1, EP2**

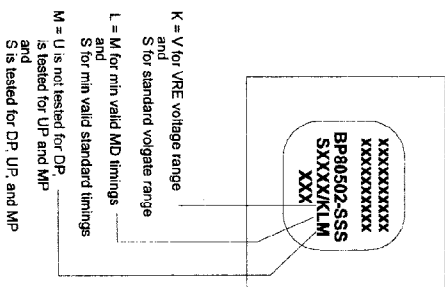
The Flash EPROM Type Select lets you configure the mainboard when using Intel 28F001BX-T or SST29EE010 Flash EPROM chip. Your mainboard uses the SST chip as default.

Programmable Flash EPROM	EP1	EP2
Intel 28F010		
Intel 28F001BX-T		
SST 29EE010 (Default)		

**CPU Voltage Mode Select: VR1, VR2**

These jumpers allow you to modify the voltage of the system with the corresponding CPU upgrade.

CPU Voltage	VR1	VR2
P54C STD, VR (3.384V)		
P54C VRE (3.49V)		
P55C (2.5V/3.3V)		

**Bottom Side Marking :****Connectors (in alphabetical order)**

Connectors allow the mainboard to link electronically with other parts of the system. Some connectors have two pins, others have three, or five pins. Some malfunction problems encountered with your system may be caused by loose or improper connections. Ensure that all connections are in place and firmly attached.

**CPU Fan Connector: FAN**

This connector is linked to the CPU fan.

