

Table of Contents

Chapter 1 Overview

Package Checklist	2
The VA-503 Mainboard	3
Main Features	4
Advanced Features	6
PC '97 Compliant	7
Infrared Connection.....	7
Universal Serial Bus (USB) Functionality	8

Chapter 2 Installation Procedures

Mainboard Layout.....	10
1). Set System Jumpers	11
Jumpers.....	11
Clear Password: CPW.....	11
Flash ROM Type Selection: EP1, EP2	12
Power Supply Type Selection: PWR.....	13
CPU to SRAM Data Transacting Mode Selection: SRAM	13
2). Install System RAM Modules.....	13
RAM Module Configuration.....	13
Install SIMMs	16
Remove SIMMs	16
Install DIMMs	17
Remove DIMMs.....	17
Cache Memory.....	18
3). Install the CPU	19
CPU External Clock (BUS) Frequency: CLK1, CLK2, CLK3	20
CPU Internal Freq. to Bus Clock Ratio:	
FREQ1, FREQ2, FREQ3	20
Intel Pentium MMX CPUs.....	21
Frequency.....	21
Voltage.....	21
AMD-K6 CPUs	22
Frequency.....	22
Voltage.....	23

Cyrix 6x86L/6x86MX CPUs.....	24
Frequency.....	24
Voltage.....	25
IBM 6x86L/6x86MX CPUs	26
Frequency.....	26
Voltage.....	27
4). Install Expansion Cards	28
5). Connect Cables and Power Supply	29
Keyboard Connector: AT_KB	29
Serial Port Connectors: COM1, COM2	29
Universal Serial Bus Connectors: JUSB	29
CPU Fan Connector: CPU_FAN	30
System Case Fan Connector: CHAS_FAN.....	30
Infrared Connector: IR	30
Floppy Diskette Drive Connector: FDD.....	31
Remote Power Connector: CN5.....	31
EICA CPU Fan Connector: EICA.....	31
PS/2 Mouse Connector: MS_CON	32
Printer Connector: LPT	32
IDE HDD Device Connectors: PRIMARY, SECONDARY	32
AT Power Supply Connector: POWER.....	33
ATX Power Supply Connector: ATX_PWR.....	33
Remote Wake-Up Connector: RWU	33
Front Panel Block Connector: F_PNL	34

Chapter 3 BIOS Setup

CMOS Setup Utility.....	35
Standard CMOS Setup.....	36
Hard Disk Configurations.....	36
Software Turbo Speed	37
BIOS Features Setup.....	38
Chipset Features Setup.....	41
Power Management Setup.....	44
PNP/PCI Configuration Setup.....	48
Load BIOS Defaults	50

Table of Contents

Load Setup Defaults	50
Integrated Peripherals	50
Supervisor/User Password	54
IDE HDD Auto Detection	55
Save and Exit Setup	56
Exit without Saving	56

Appendix A Software Utilities

Bus Master IDE Driver	57
VIA INF Update Software	57
AGP VxD Support Utility	57
Anti-Virus Tool (optional)	57
Desktop Management Interface (DMI) Software	58
BIOS Flash Software	58

This Page Intentionally Left Blank