
Tomcat n3400B S2925 CPU VRD Heat Dispersion Notice

INSTALL FAN INTO CHASSIS TO LET AIR FLOW IN!!!

-To ensure that the board runs efficiently and does not overheat, make sure there is air flow around the CPU VRD (as shown) to help disperse the heat generated around the CPU.

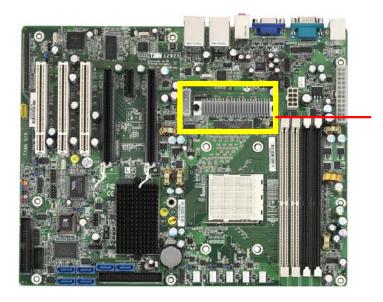

CPU VRD

D/N: D1833-100

http://www.TYAN.com