

TOTAL MEMORY	BANK 0 (30-PIN)	BANK 1 (72-PIN)	BANK 2 (72-PIN)
81MB	16M x 4	1M x 1	16M x 1
	16M x 4	16M x 1	1M x 1
84MB	16M x 4	4M x 1	16M x 1
	16M x 4	16M x 1	4M x 1
96MB	16M x 4	16M x 1	16M x 1

Table 3-1. DRAM Configurations

## Installation Instructions

→ **NOTE :** Always observe static electricity precautions. See "Handling Precautions" at the start of this manual.

Assuming the 486-GVT has been mounted on your computer system unit, follow the instructions below:

1. Locate the SIMM banks on the mainboard. Determine your desired configuration to be installed.
2. Insert the SIMM edge connector at a 75 degree angle onto the socket.

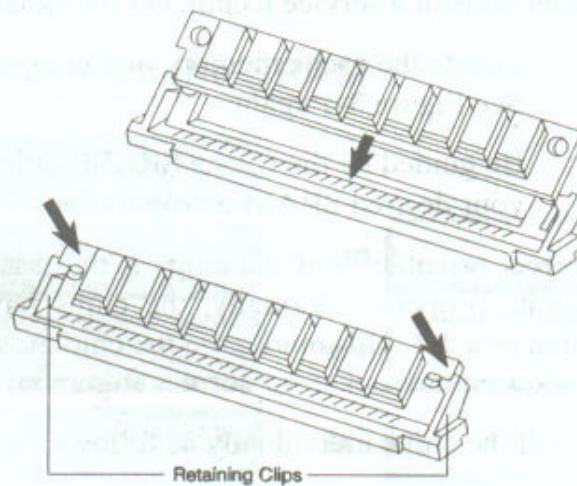


Figure 3-2. Installing SIMMs