

Installation Procedures

The VB-601 has several user-adjustable jumpers on the board that allow you to configure your system to suit your requirements. This chapter contains information on the various hardware settings on your motherboard.



To set up your computer, you should follow these installation steps:

- n [Step 1 - Set system switches](#)
- n [Step 2 - Install memory modules](#)
- n [Step 3 - Install the CPU cartridge](#)
- n [Step 4 - Install expansion cards](#)
- n [Step 5 - Connect devices](#)
- n [Step 6 - Set up BIOS feature](#)
- n [Step 7 - Set up software utilities](#)


CAUTION: If you use an electric drill to install this motherboard on your chassis, please wear a static wrist strap. The recommended electric drill torque is from 5.0 to 8.0 kg/cm to avoid damaging the chips' pins.

Clear CMOS: SW1-5

The CMOS RAM is powered by the onboard button cell battery. To clear the RTC data: (1). Turn off your computer, (2). Enable it, (3). Turn on your computer, (4). Hold down the Del key during boot up and enter BIOS setup to re-enter user preferences, (5). Turn off the computer, (6). Disable the Clear CMOS feature, (7). Turn on the computer.

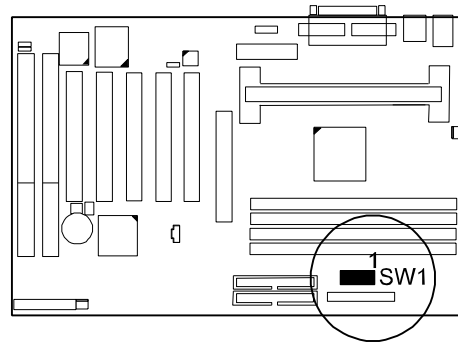


Enable (Clear CMOS)




Disable (Default)

Clear Password: SW1-6

This switch allows you to enable or to disable the password settings. You may need to adjust switch if you forget your password. To clear the password setting: (1) Turn off your computer, (2) Enable this feature by setting the SW1-6 to On position, (3) Turn on your computer, (4) Hold down the Delete key when boots and enter BIOS Setup to re-enter user preferences, (5) Turn off your computer, (6) Disable the Clear Password feature by setting the SW1-6 to Off position, (7) Turn on your computer for the new settings to take effect.




Enable (Clear Password)



Disable (Default)

Flash ROM Type Selection: EP1, EP2

These two jumpers allow you to configure the type of flash ROM chip. This jumper setting is correct by manufactory default. If you want to know the flash ROM type installed on this motherboard, remove the sticker from the chip to see its type.

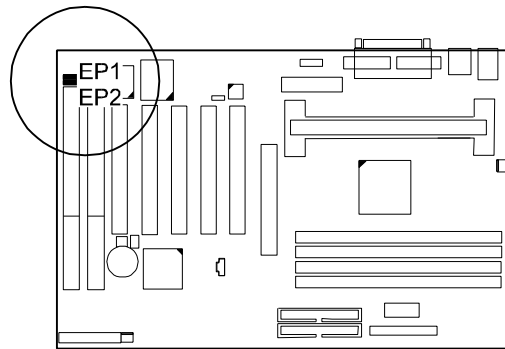



2MB:

MXIC 28F2000TPC


EP1	
EP2	

SST 29EE020
ATMEL AT29C020
AMD AM29F002NT

EP1	
EP2	

CPU Internal Frequency: SW1-1, SW1-2, SW1-3, SW1-4

These four switches are used to decide the internal frequency of the CPU.

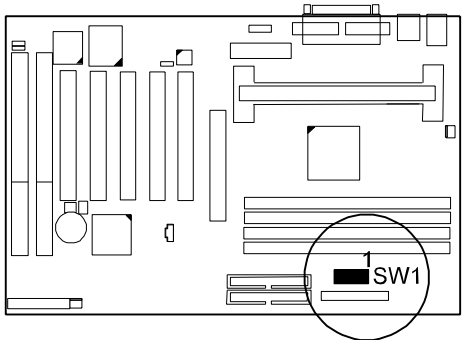

<i>Bus Frequency = 100MHz</i>	<i>Bus Frequency = 66MHz</i>	<i>Switches Settings</i>
350MHz	233MHz	
400MHz	266MHz	
450MHz*	300MHz	
	333MHz	

NOTE: * This CPU was not available for testing at time of printing.